

Earth Ground Resistance Tester Kit

Includes all hardware necessary to measure earth ground
In 3 ranges from 20 to 2000Ω

Features:

- Large dual display with backlight
- Test Hold function for easy operation
- Automatic Zero adjustment
- AC/DC Voltage, Resistance, and Continuity
- Auto Power off
- Overrange and low battery indication
- Complete with test leads, 2 auxiliary earth bars, carrying case, protective rubber holster and six 1.5V AA batteries



Ordering Information:

382252.....Earth Ground Resistance Tester Kit
382252-NIST382252 with NIST Certificate
382253.....Replacement Earth Bars (2pk)
382254.....Replacement Set of Leads

TRANSCAT

Visit us at Transcat.com!

35 Vantage Point Drive Rochester, NY 14624
Call 1.800.800.5001



Specifications	
Earth Ground Resistance ranges	20Ω / 200Ω / 2000Ω
Basic Accuracy	±(2%rdg+2d)
Resolution	0.01Ω / 0.1Ω / 1Ω
Test Current / Frequency	<2.5mA / 820Hz
AC Earth Voltage / Frequency	0 to 200VAC / 50 to 400Hz
Accuracy	±(3%rdg+3d)
DC Voltage	0 to 1000V
Accuracy	±(0.8%rdg+3d)
Resistance	0 to 200kΩ
Accuracy	±(1%rdg+2d)
Continuity	40Ω
Power supply	Six 1.5V 'AA' Batteries
Dimensions	7.9 x 3.6 x 2" (200 x 92 x 50mm)
Weight	1.5lbs (700g) (meter only)

TRANSCAT

Visit us at Transcat.com!

35 Vantage Point Drive // Rochester, NY 14624 // Call 1.800.800.5001

