Valid as of version 02.00 (device version)

Products Solutions Services

Operating Instructions iTEMP TMT162

Dual-input temperature field transmitter with FOUNDATION Fieldbus™ protocol











iTEMP TMT162 Table of contents

Table of contents

1	Important document information 4	9.
1.1	Function of document and how to use 4	9.
1.2	Symbols used 4	9.
1.3	Documentation 6	
1.4	Registered trademarks 6	10
2	Basic safety instructions 7	10
2.1	Requirements for the personnel 7	1
2.2	Designated use	
2.3 2.4	Workplace safety	11
2.5	Operational safety	11
2.6	IT security	11
3	Incoming acceptance and product	12
	identification 9	12
3.1	Incoming acceptance 9	12
3.2	Product identification 10	12
3.3	Transport and storage	12
4	Installation instructions 12	13
4.1	Installation conditions	₋
4.2	Installation instructions	14
4.3 4.4	Display mounting	
4.4	rost-installation thetk	14
5	Wiring 15	14
5.1	Connection conditions	14
5.2 5.3	Connecting the sensor	14
5.4	Connecting the measuring device	14
5.5	Post-connection check	
6	Operating options	14
6.1 6.2	Overview of operation options	In
0.2	operating tool	
7	System integration	
7.1	Device description 27	
7.2	Integration of measuring device into system 27	
8	Commissioning 31	
8.1	Function check	
8.2	Switching on the transmitter	
8.3	Commissioning	
9	Diagnostics and troubleshooting 37	
9.1	General troubleshooting	

9.2 9.3 9.4	Overview of diagnostic information Firmware history and overview of compatibility	41
10	Maintenance	44
10.1	Endress+Hauser services	44
11	Repair	45
11.1 11.2 11.3 11.4	General notes	45 45 47 47
12	Accessories	47
12.1 12.2 12.3 12.4	Device-specific accessories	47 48 48 49
13	Technical data	50
13 14	Technical data Operation via FOUNDATION	50
		50 60
14.1 14.2 14.3 14.4 14.5 14.6 14.7	Operation via FOUNDATION Fieldbus™ Block model	60 60 66 80 81
14.1 14.2 14.3 14.4 14.5 14.6 14.7	Operation via FOUNDATION Fieldbus™ Block model	60 60 66 80 80 81

1 Important document information

1.1 Function of document and how to use

1.1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.1.2 Safety Instructions (XA)

When using in hazardous areas, the national safety requirements must be met. Separate Ex documentation is contained in these Operating Instructions for measurement systems that are to mounted in hazardous areas. Strict compliance with the installation instructions, ratings and safety instructions as listed in this supplementary documentation is mandatory. Make sure that you use the right Ex-specific documentation for the right device with approval for use in hazardous areas! The number of the specific Ex documentation (XA...) is provided on the nameplate. If the two numbers (on the Ex documentation and the nameplate) are identical, then you may use this Ex-specific documentation.

1.2 Symbols used

1.2.1 Safety symbols

Symbol	Meaning
⚠ DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
▲ WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
▲ CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current	~	Alternating current
≂	Direct current and alternating current	41	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.	\Rightarrow	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Symbols for certain types of information

Symbol	Meaning
\checkmark	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
[i	Reference to documentation
A	Reference to page
	Reference to graphic
1. , 2. , 3	Series of steps
L-	Result of a sequence of actions
?	Help in the event of a problem
	Visual inspection

1.2.4 Tool symbols

Meaning
Flat-blade screwdriver
Phillips screwdriver
Allen key

Symbol	Meaning
AS	Open-ended wrench
A0011222	
0	Torx screwdriver
A0013442	

1.3 Documentation

Document	Purpose and content of the document	
Technical Information TI00086R/09	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.	
Brief Operating Instructions KA00189R/09	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.	

The document types listed are available:
In the Download Area of the Endress+Hauser Internet site: www.endress.com →
Downloads

1.4 Registered trademarks

FOUNDATION™ Fieldbus Registered trademark of the Fieldbus Foundation, Austin, Texas, USA

iTEMP TMT162 Basic safety instructions

2 Basic safety instructions

2.1 Requirements for the personnel

NOTICE

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task
- ► Are authorized by the plant owner/operator
- ► Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ► Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ► Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ► Following the instructions in these Operating Instructions

2.2 Designated use

The device is a universal and configurable temperature field transmitter with either one or two temperature sensor inputs for resistance thermometers (RTD), thermocouples (TC) and resistance and voltage transmitters. The unit is designed for mounting in the field.

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Workplace safety

For work on and with the device:

 Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

A CAUTION

Risk of injury!

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Power supply

► The unit must only be powered by a power supply that operates using an IEC 61010-1 compliant energy limited circuit, "SELV or Class 2 circuit".

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.

Basic safety instructions iTEMP TMT162

▶ Use original spare parts and accessories from Endress+Hauser only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection or safety equipment):

- ▶ Based on the technical data on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area. The nameplate can be found on the side of the transmitter housing.
- ► Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

Electromagnetic compatibility

The measuring system complies with the general safety requirements in accordance with EN 61010-1, the EMC requirements of IEC/EN 61326 and NAMUR Recommendation NE 21 and NE 89.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.


2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.


3 Incoming acceptance and product identification

3.1 Incoming acceptance

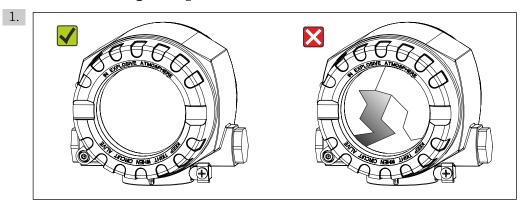


Unpack the temperature transmitter carefully. Is the packaging or content damaged?

- Damaged components may not be installed as the manufacturer can otherwise not guarantee compliance with the original safety requirements or the material resistance, and can therefore not be held responsible for any resulting damage.
- 2. Is the delivery complete or is anything missing? Check the scope of delivery against your order.

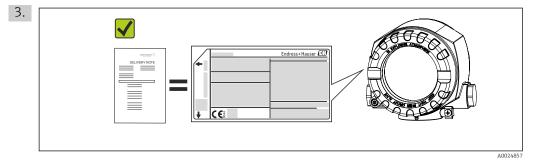

Does the nameplate match the ordering information on the delivery note?

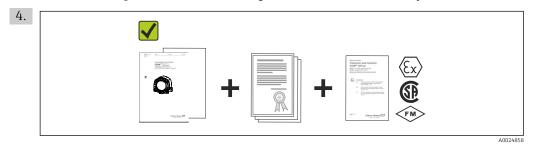

Are the technical documentation and all other necessary documents provided?

If one of the conditions does not comply, contact your Endress+Hauser distributor.

3.2 Product identification


The following options are available for identification of the device:

- Nameplate specifications
- Enter the serial number from the nameplate in *W@M Device Viewer* (www.endress.com/deviceviewer): All data relating to the device and an overview of the technical documentation supplied with the device are displayed.

3.2.1 Nameplate

Is this the correct device?

Check the data on the nameplate of the device and compare them against the requirements of the measuring point:

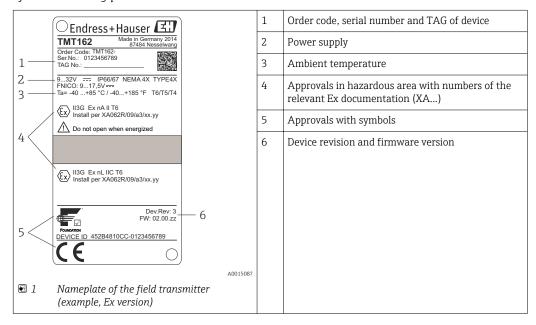

3.2.2 Scope of delivery

The scope of delivery of the device comprises:

- Temperature transmitter
- Wall or pipe mounting bracket, optional
- 7/8" fieldbus device connector (FF), optional
- Dummy plugs
- Hard copy of multi-language Brief Operating Instructions
- Additional documentation for devices which are suitable for use in the hazardous area (②◆●), such as Safety Instructions (XA), Control or Installation Drawings (ZD).

3.2.3 Certificates and approvals

Device certification FOUNDATION Fieldbus

The temperature field transmitter has successfully passed all the test procedures implemented and has been certified and registered by the Fieldbus FOUNDATION. The device thus meets all the requirements of the following specifications:

- Certified to fieldbus specification, revision status 6.1.2
- Device certification number: IT099000
- The device meets all the specifications of FOUNDATION Fieldbus-H1 (www.fieldbus.org)
- The device can also be operated with certified devices of other manufacturers (interoperability)

An overview of other approvals and certificates can be found in chapter "Technical data".

→ 🖺 59

3.3 Transport and storage

Carefully remove all the packaging material and protective covers that are part of the transported package.



ightharpoonup Dimensions and operating conditions: ightharpoonup ightharpoonup 50

Pack the device so that it is reliably protected against impact when it is stored (and transported). The original packaging offers the best protection.

Storage temperature	Without display -50 to +100 °C (-58 to +212 °F)
With display –50 to +80 °C (–58 to +176 °F)	

Installation instructions iTEMP TMT162

4 Installation instructions

If stable sensors are used, the device can be fitted directly to the sensor. For remote mounting to a wall or stand pipe, two mounting brackets are available. The illuminated display can be mounted in four different positions.

4.1 Installation conditions

4.1.1 Dimensions

The dimensions of the device are provided in the "Technical data" section. $\rightarrow \triangleq 58$

4.1.2 Installation point

Information about the conditions (such as the ambient temperature, degree of protection, climate class etc.) that must be present at the installation point so that the device can be mounted correctly is provided in the "Technical data" section .

When using in hazardous areas, the limit values of the certificates and approvals must be observed (see Ex Safety Instructions).


4.2 Installation instructions

NOTICE

Do not overtighten the mounting screws, as this could damage the field transmitter.

► Maximum torque = 6 Nm (4.43 lbf ft).

4.2.1 Direct sensor mounting

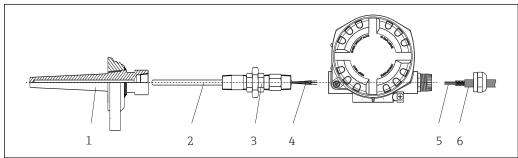

Δ00248


- 2 Direct field transmitter mounting on sensor
- 1 Thermowell
- 2 Insert
- 3 Neck tube nipple and adapter
- 4 Sensor cables
- 5 Fieldbus cables
- 6 Fieldbus shielded cable
- 1. Mount the thermowell and screw down (1). Screw the gauge slide into the thermowell (2).
- 2. Fit the necessary neck tube nipples and adapter (3) on the thermowell. Seal the nipple and adapter thread with silicone tape.
- 3. Feed the sensor cables (4) through the neck tube, adapter and cable gland of the field transmitter housing.
- 4. Mount the fieldbus shielded cable or fieldbus connector (6) on the other cable gland.

iTEMP TMT162 Installation instructions

5. Guide the fieldbus cables (5) through the cable gland of the fieldbus transmitter housing into the connection compartment.

6. Seal both cable glands leak-tight as described in the section: *Ensuring the degree of protection*. (→ 🗎 20) Both cable glands must meet explosion protection requirements.


4.2.2 Remote mounting

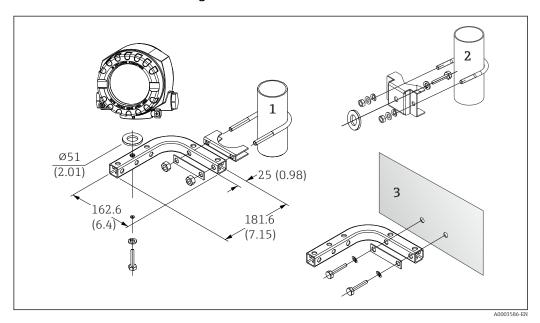

- Installation of the field transmitter using the mounting brackets, as described as accessories. Dimensions in mm (in)
- 1 Mounting with combined wall/pipe mounting bracket
- 2 Mounting with pipe mounting bracket 2"/V4A
- 3 Mounting with wall mounting bracket

Installation instructions iTEMP TMT162

4.3 Display mounting

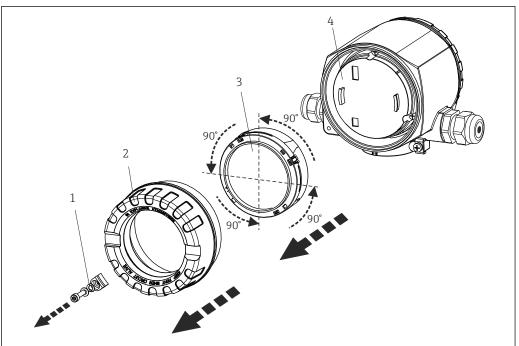

A0025417

- \blacksquare 4 display installation positions, attachable in 90° stages
- 1 Cover clamp
- 2 Housing cover with O-ring
- 3 Display with retainer and twist protection
- 4 Electronics module
- 1. Remove the cover clamp (1).
- 2. Unscrew the housing cover together with the O-ring (2).
- 3. Remove the display with twist protection (3) from the electronics module (4). Fit the display with retainer in the desired position in 90° stages and plug it into the correct slot on the electronics module.
- 4. Then screw the housing cover together with the O-ring.
- 5. Fit the cover clamp (1) back on.

4.4 Post-installation check

After installing the device, always run the following final checks:

Device condition and specifications	Notes
Is the device undamaged (visual inspection)?	-
Do the ambient conditions match the device specification (e.g. ambient temperature, measuring range, etc.)?	See the 'Technical data' section. → 🖺 50

iTEMP TMT162 Wiring

5 Wiring

5.1 Connection conditions

A CAUTION

The electronics could be destroyed

- ► Switch off power supply before installing or connecting the device. Failure to observe this may result in destruction of parts of the electronics.
- ▶ When installing Ex-approved devices in a hazardous area please take special note of the instructions and connection schematics in the respective Ex documentation added to these Operating Instructions. Your supplier is available for assistance if required.

A Phillips head screwdriver is required to wire the field transmitter at the terminals.

NOTICE

Do not overtighten the screw terminals, as this could damage the transmitter.

► Maximum torque = 1 Nm ($\frac{3}{4}$ lbf ft).

For wiring the device proceed as follows:

- 1. Remove the cover clamp. $\rightarrow \triangleq 14$
- 2. Unscrew the housing cover on the connection compartment together with the O-ring. $\rightarrow \stackrel{\triangle}{=} 14$
- 3. Open the cable glands of the device.
- 4. Route the appropriate connecting cables through the openings of the cable glands.
- 5. Connect the cables as indicated $\rightarrow \blacksquare 5$, $\triangleq 17$ as well as in the sections: Connecting the sensor $\rightarrow \triangleq 17$ and Connecting the measuring device. $\rightarrow \triangleq 18$

On completion of the wiring, screw the screw terminals tight. Tighten the cable glands again. Refer to the information provided in the 'Ensuring the degree of protection' section. Screw the housing cover tight again and fit the cover clamp back on. $\Rightarrow \implies 14$

In order to avoid connection errors always follow the instructions in the post-connection check section before commissioning!

5.1.1 Fieldbus cable specifications

Cable type

Twin-core cables are required for connecting the device to the FOUNDATION Fieldbus H1. Following IEC 61158-2 (MBP), four different cable types (A, B, C, D) can be used with the FOUNDATION Fieldbus, only two of which (cable types A and B) are shielded.

- Cable types A or B are particularly preferable for new installations. Only these types have cable shielding that guarantees adequate protection from electromagnetic interference and thus the most reliable data transfer. In the case of cable type B, several fieldbuses (same degree of protection) may be operated in one cable. No other circuits are permissible in the same cable.
- Practical experience has shown that cable types C and D should not be used due to the lack of shielding, since the freedom from interference generally does not meet the requirements described in the standard.

	Туре А	Туре В
Cable structure	Twisted pair, shielded	One or more twisted pairs, fully shielded
Wire size	0.8 mm ² (AWG 18)	0.32 mm ² (AWG 22)
Loop-resistance (direct current)	44 Ω/km	112 Ω/km

Wiring iTEMP TMT162

	Туре А	Type B
Characteristic impedance at 31.25 kHz	100 Ω ± 20%	100 Ω ± 30%
Attenuation constant at 39 kHz	3 dB/km	5 dB/km
Capacitive asymmetry	2 nF/km	2 nF/km
Envelope delay distortion (7.9 to 39 kHz)	1.7 ms/km	_ 1)
Shield coverage	90%	1)
Max. cable length (incl. spurs >1 m)	1900 m	1200 m

1) Not specified

Suitable fieldbus cables (type A) from various manufacturers for non-hazardous areas are listed below:

■ Siemens: 6XV1 830-5BH10

■ Belden: 3076F

Kerpen: CeL-PE/OSCR/PVC/FRLA FB-02YS(ST)YFL

Maximum overall cable length

The maximum network expansion depends on the type of protection and the cable specifications. The overall cable length combines the length of the main cable and the length of all spurs (>1 m). Please note the following:

- The maximum permissible overall cable length depends on the cable type used.
- If repeaters are used, the maximum permissible cable length is doubled.

A maximum of three repeaters are permitted between user and master.

Maximum spur length

The line between the distribution box and field device is described as a spur. In the case of non-Ex applications, the max. length of a spur depends on the number of spurs (>1 m):

Number of spurs	1 to 12	13 to 14	15 to 18	19 to 24	25 to 32
Max. length per spur	120 m (394 ft)	90 m (295 ft)	60 m (197 ft)	30 m (98 ft)	1 m (3.28 ft)

Number of field devices

In accordance with IEC 61158-2 (MBP), a maximum of 32 field devices can be connected per fieldbus segment. However, this number is restricted under certain conditions (explosion protection, bus power option, field device current consumption). A maximum of four field devices can be connected to a spur.

Shielding and grounding

Optimum electromagnetic compatibility of the fieldbus system can only be guaranteed if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible. A shield coverage of 90% is ideal. To ensure an optimum shield effect, connect the shield as often as possible to the reference ground. Where applicable, national installation regulations and guidelines must be observed! Where there are large differences in potential between the individual grounding points, only one point of the shielding is connected directly with the reference ground. In systems without potential equalization, therefore, cable shielding of fieldbus systems should only be grounded on one side, for example at the fieldbus supply unit or at safety barriers.

iTEMP TMT162 Wiring

NOTICE

Damage to the fieldbus cable or fieldbus shield

▶ If the shielding of the cable is grounded at more than one point in systems without potential matching, power supply frequency equalizing currents can occur that damage the bus cable or shielding or have a serious effect on signal transmission.

Bus termination

The start and end of each fieldbus segment are always to be terminated with a bus terminator. With various junction boxes (non-Ex), the bus termination can be activated via a switch. If this is not the case, a separate bus terminator must be installed.

Please note the following:

- In the case of a branched bus segment, the device furthest from the segment coupler represents the end of the bus.
- If the fieldbus is extended with a repeater, then the extension must also be terminated at both ends.
- Further information


General information and further pointers on wiring can be found on www.fieldbus.org, the website of the Fieldbus Foundation.

5.2 Connecting the sensor

NOTICE

► ▲ESD - electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in destruction or malfunction of parts of the electronics.

Terminal assignment

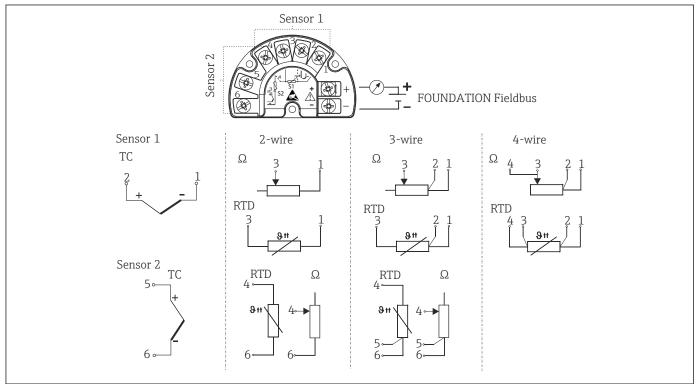

A0024515-EN

Wiring the field transmitter

Wiring iTEMP TMT162

NOTICE

When connecting 2 sensors ensure that there is no galvanic connection between the sensors (e.g. caused by sensor elements that are not isolated from the thermowell). The resulting equalizing currents distort the measurements considerably.

► The sensors must remain galvanically isolated from one another by connecting each sensor separately to a transmitter. The transmitter provides sufficient galvanic isolation (> 2 kV AC) between the input and output.

The following connection combinations are possible when both sensor inputs are assigned:

	Sensor input 1				
		RTD or resistance transmitter, two-wire	RTD or resistance transmitter, three-wire	RTD or resistance transmitter, four-wire	Thermocouple (TC), voltage transmitter
	RTD or resistance transmitter, two-wire	V	Ø	-	Ø
Sensor input 2	RTD or resistance transmitter, three- wire	Ø	Ø	-	Ø
	RTD or resistance transmitter, four-wire	-	-	-	-
	Thermocouple (TC), voltage transmitter	Ø	Ø	V	Ø

5.3 Connecting the measuring device

5.3.1 Cable glands or entries


A CAUTION

Risk of damage

- ► Switch off power supply before installing or connecting the device. Failure to observe this may result in destruction of parts of the electronics.
- ▶ If the device has not been grounded as a result of the housing being installed, we recommended grounding it via one of the ground screws. Observe the grounding concept of the plant! Keep the cable shield between the stripped fieldbus cable and the ground terminal as short as possible!
- ▶ If the shielding of the fieldbus cable is grounded at more than one point in systems without additional potential matching, power supply frequency equalizing currents can occur that damage the cable or the shielding. In such cases the shielding of the fieldbus cable is to be grounded on only one side, i.e. it must not be connected to the ground terminal of the housing. The shield that is not connected should be insulated!
- ▶ We recommend that the fieldbus not be looped using conventional cable glands. If you later replace even just one device, the bus communication will have to be interrupted.
- The terminals for the fieldbus connection have an integral polarity protection.
 - Cable cross-section: max. 2.5 mm²
 - A shielded cable must be used for the connection.

Follow the general procedure. $\rightarrow \blacksquare 15$

iTEMP TMT162 Wiring

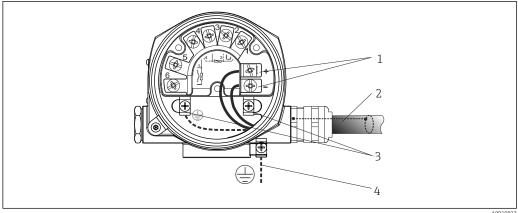

№ 6 Connecting the device to the FOUNDATION Fieldbus fieldbus cable

- FF terminals fieldbus communication and power supply
- 2 Fieldbus cable (FOUNDATION Fieldbus)
- 3 Ground terminals
- Ground terminal (external, relevant for remote version)

5.3.2 Fieldbus connector

The connection technology of FOUNDATION Fieldbus allows devices to be connected to the fieldbus via uniform mechanical connections such as T-boxes, junction boxes etc. This connection technology using prefabricated distribution modules and plug-in connectors offers substantial advantages over conventional wiring:

- Field devices can be removed, replaced or added at any time during normal operation. Communication is not interrupted.
- Installation and maintenance are significantly easier.
- Existing cable infrastructures can be used and expanded instantly, e.g. when constructing new star distributors using 4-channel or 8-channel distribution modules.

The device can therefore be supplied with the option of a fieldbus connector. If the transmitter has been ordered with the option of a fieldbus connector (order code \rightarrow cable entry: position C and D), the fieldbus connector is ready mounted and wired upon delivery. Fieldbus connectors for retrofitting can be ordered from Endress+Hauser as an accessory.

Supply line/T-box shielding


Use cable glands with good EMC properties, if possible with all-round contact of the cable shielding (Iris spring). This requires small differences in potential, poss. potential matching.

- The fieldbus cable shielding must be intact.
- The shielding connection must always be kept as short as possible.

Ideally, cable glands with Iris springs should be used for the shielding connection. The shielding is connected to the T-box housing by means of the Iris spring located inside the gland. The shielding braid is located beneath the Iris spring. When the armored thread is tightened, the Iris spring is pressed against the shielding, thereby creating a conductive connection between the shielding and the metal housing.

A connection box or a plug-in connection is to be seen as part of the shielding (Faraday shield). This applies, in particular, to remote boxes if these are connected to a FOUNDATION Fieldbus device by means of a pluggable cable. In such instances, a metallic connector must be used where the cable shielding is positioned at the plug housing (e.g. prefabricated cables).

Wiring iTEMP TMT162

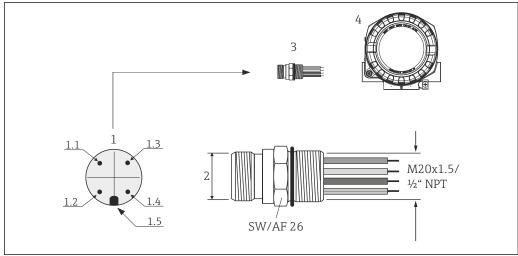

A00108

- 7 Connectors for connecting to the FOUNDATION Fieldbus
- 1 Connectors on housing (male pin assignment/color codes):
- 1.1 Blue wire: FF- (terminal 2)
- 1.2 Brown wire FF+ (terminal 2)
- 1.3 Gray wire: shield
- 1.4 Green-yellow wire: ground
- 1.5 Positioning key
- 2 7/8" UNC thread
- 3 Fieldbus connector
- 4 Field housing

Connector technical data:

Wire cross-section	4 x 0.8 mm ²	
Connection thread	M20 x 1.5 / ½" NPT	
Degree of protection	IP 67 according to DIN 40 050 IEC 529	
Contact plating	CuZn, gold-plated	
Housing material	1.4401 (316)	
Flammability	V - 2 according to UL - 94	
Ambient temperature range	−40 to +105 °C (−40 to +221 °F)	
Current carrying capacity	9 A	
Rated voltage	Max. 600 V	
Contact resistance	≤ 5 mΩ	
Insulation resistance	$\geq 10^9 \Omega$	

5.4 Ensuring the degree of protection


The measuring system meets all the requirements of IP67 protection. Compliance with the following points is mandatory following installation in the field or servicing in order to ensure that IP67 protection is maintained:

- The housing seals must be clean and undamaged when inserted into their grooves. The seals must be dried, cleaned or replaced if necessary.
- All housing screws and screw caps must be firmly tightened.
- The cables used for connection must be of the specified outside diameter (e.g. M20x1.5, cable diameter 8 to 12 mm).
- Firmly tighten the cable gland.

iTEMP TMT162 Wiring

• The cables must loop down before they enter the cable glands ("water trap"). This means that any moisture that may form cannot enter the gland. Install the device so that the cable glands are not facing upwards.

- Cable glands not used are to be blanked off using the dummy plugs provided.
- Do not remove the grommet from the cable gland.

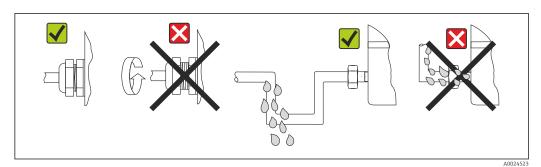

 \blacksquare 8 Connection tips to retain IP67 protection

5.5 Post-connection check

Device condition and specifications	Notes
Is the device or cable undamaged (visual inspection)?	
Electrical connection	Notes
Does the supply voltage match the specifications on the nameplate?	9 to 32 V _{DC}
Do the cables used comply with the specifications?	Fieldbus cable → 🖺 15 Sensor cables → 🖺 17
Do the cables have adequate strain relief?	
Are the power supply and fieldbus cables correctly connected?	See the wiring diagram inside the cover of the terminal compartment
Are all screw terminals firmly tightened?	
Are all the cable glands installed, tightened and sealed? Cable run with "water trap"?	→ 🖺 20
Are all the housing covers installed and tightened?	
FOUNDATION Fieldbus electrical connection	Notes
Are all the connecting components (T-boxes, junction boxes, connectors, etc.) connected with each other correctly?	
Has each fieldbus segment been terminated at both ends with a bus terminator?	
Has the max. length of the fieldbus cable been observed in accordance with the FOUNDATION Fieldbus specifications?	
Has the max. length of the spurs been observed in accordance with the FOUNDATION Fieldbus specifications?	Fieldbus cable → 🖺 15
Is the fieldbus cable fully shielded and correctly grounded?	

Operating options iTEMP TMT162

6 Operating options


6.1 Overview of operation options

You have a number of options for configuring and commissioning the device:

- Configuration programs →

 24
 - The configuration of FF functions and device-specific parameters is primarily done via the Fieldbus interface. You can obtain special configuration and operating programs from various manufacturers for these purposes.
- Miniature switches (DIP switches) for diverse hardware settings →

 23
 You can make the following hardware settings for the FOUNDATION Fieldbus interface using miniature switches (DIP switches) on the electronics module:
 - Enabling/disabling the simulation mode in the Analog Input function block
 - Switching the hardware write protection on/off

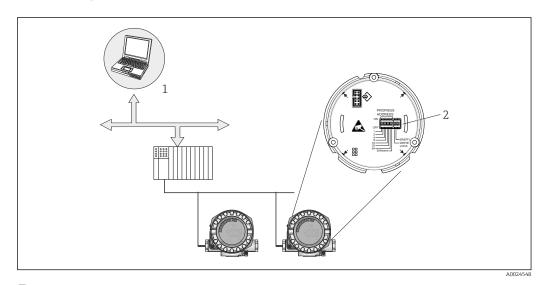


1 Configuration∕operating programs for operation via FOUNDATION Fieldbus™ (Foundation Fieldbus functions, device parameter)

2 DIP switches for hardware settings (write protection, simulation mode)

6.1.1 Measured value display and operating elements

Display elements

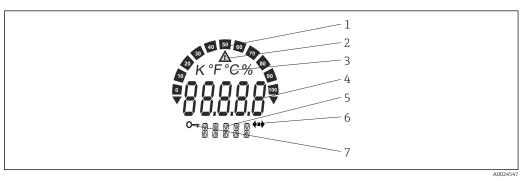

■ 10 LC display of the field transmitter (illuminated, can be plugged in in 90° steps)


iTEMP TMT162 Operating options

Item No.	Function	Description
1	Bar graph display	In stages of 10% with markers for measuring range undershoot and overshoot. The bar graph display flashes when an error occurs.
2	'Caution' symbol	This is displayed when an error or warning occurs.
3	Unit display K, °F, °C or %	Unit display for the internal measured value displayed. If an unit is selected that cannot be displayed (mV, Ohm or $^{\circ}$ R), the unit is attached to the text in the status and information display.
4	Measured value display, digit height 20.5 mm	Displays the current measured value. In case of an error or warning the related diagnostic information is indicated. $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
5	Status and information display	Indicates which value is currently shown on the display. Text can be entered for every value. In the event of an error or a warning, the sensor input that triggered the error/warning is displayed applicable, e.g. SENS1
6	'Communication' symbol	The communication symbol appears when bus communication is active.
7	'Configuration locked' symbol	The 'configuration locked' symbol appears when configuration is locked via the hardware.

Local operation

NOTICE

► ▲ESD - electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in destruction or malfunction of parts of the electronics.

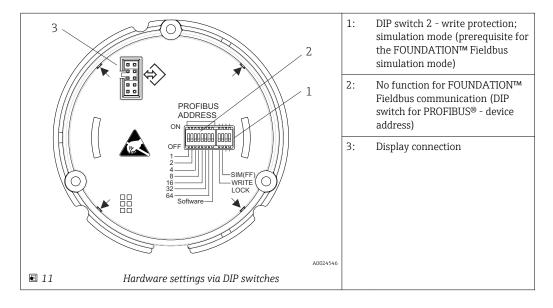

The simulation mode via the hardware setting has priority over the software setting.

Procedure for setting the DIP switch:

Operating options iTEMP TMT162

- 1. Remove the cover clamp.
- 2. Unscrew the housing cover together with the O-ring.
- 3. If necessary, remove the display with retainer from the electronics module.
- 4. Configure the hardware write protection **WRITE LOCK** and simulation mode **SIM(FF)** accordingly with the aid of the DIP switches. In general, the following applies: switch to ON = function enabled, switch to OFF = function disabled.
- 5. Installation is the reverse of the removal procedure.

6.2 Access to the operating menu via the operating tool

System files

You require the following files for commissioning and configuring the network:

- Commissioning → DD (Device Description: *.sym, *.ffo, *sy5, *ff5)
- Network configuration → CFF file (Common File Format)

6.2.1 FieldCare

Function scope

FDT/DTM-based plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and help you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. Access takes place via the FOUNDATION Fieldbus™ protocol

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook
- $\fill \ensuremath{ \prod}$ For details, see Operating Instructions BA027S/04/xx and BA059AS/04/xx

Source for device description files

 
iTEMP TMT162 Operating options

User interface



A0024853-EN

6.2.2 DeviceCare



6.2.3 Field Xpert

Function scope

Field Xpert is an industrial PDA with integrated touchscreen for commissioning and maintaining field devices in explosion hazardous and safe areas. It enables the efficient configuration of FOUNDATION fieldbus, HART and WirelessHART devices. Communication is wireless via Bluetooth or WiFi interfaces.

Source for device description files

See data → 🖺 26

System integration iTEMP TMT162

7 System integration

Version data for the device

Firmware version	02.00.zz	 On the title page of the Operating Instructions On nameplate Parameter firmware version FIRMWARE_VERSION in the Resource Block.
Manufacturer ID	0x452B48	Parameter manufacturer ID (MANUFAC_ID) in the Resource Block.
Device type	0x10CC	Parameter device type (DEV_TYPE) in the Resource Block.
Interoperability Test Kit (ITK)	Revision status 6.1.2	
Device revision	3	 On transmitter nameplate Parameter device revision (DEV_REV) in the Resource Block

The suitable device description file (DD) for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tools

Operating tool via FOUNDATION Fieldbus	Sources for obtaining device descriptions (DD/DTM)
FieldCare (Endress+Hauser)	 www.endress.com → Downloads → Product Code: TMT162 → Media Type: Software → Device drivers Complete software package: https://portal.endress.com/webdownload/FieldCareDownloadGui CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
FieldXpert SFX350, SFX370 (Endress+Hauser)	Use update function of handheld terminal
PACTware (by PACTware)	DTM: https://portal.endress.com/webdownload/FieldCareDownloadGui
AMS, Field Communicator 475 (Emerson Process Management)	www.endress.com → Downloads → Product Code: TMT162 → Media Type: Software → Device drivers
NI Configurator (National Instruments)	Cyclic integration (GSD, CFF, EDS, subject to registration in user organizations), $\rightarrow \stackrel{\cong}{=} 27$
Plant Resource Manager (PRM), FieldMate	 DTM: https://portal.endress.com/webdownload/FieldCareDownloadGui www.endress.com → Downloads → Product Code: TMT162 → Media Type: Software → Device drivers
Process asset management: Fieldbus builder, Control builder F (ABB)	 DTM: https://portal.endress.com/webdownload/FieldCareDownloadGui www.endress.com → Downloads → Product Code: TMT162 → Media Type: Software → Device drivers
FactoryTalk Asset Centre (FTAC), FieldCare in Rockwell (Rockwell)	DTM: https://portal.endress.com/webdownload/FieldCareDownloadGui
Control Builder, Field Device Manager (Honeywell)	 DTM: https://portal.endress.com/webdownload/FieldCareDownloadGui www.endress.com → Downloads → Product Code: TMT162 → Media Type: Software → Device drivers
Archestra (Invensys/Foxboro)	 DTM: https://portal.endress.com/webdownload/FieldCareDownloadGui www.endress.com → Downloads → Product Code: TMT162 → Media Type: Software → Device drivers
Field Communicator 375, 475 (Emerson Process Management)	Use update function of handheld terminal

iTEMP TMT162 System integration

Device description 7.1

For commissioning, diagnosis, configuration etc. make sure that process control systems or superior configuration systems can access all device data and that the operating structure is uniform. The device-specific information required for this is stored as so-called device description data in special files (the 'Device Description' - DD). This enables the device data to be interpreted and shown via the configuration program. The DD is thus a kind of 'device driver'. On the other hand, a CFF file (CFF = Common File Format) is required for the network configuration in the OFF-line mode.

These files can be acquired as follows:

- Free of charge via the Internet: www.endress.com
- Via the Fieldbus FOUNDATION Organization: www.fieldbus.org

7.2 Integration of measuring device into system


7.2.1 FOUNDATION Fieldbus technology

The FOUNDATION Fieldbus™ (FF) is a purely digital, serial communication system that connects fieldbus devices (sensors, actuators), automation and process control systems with each other. As a local communications network (LAN) for field devices the FF was primarily designed for the requirements of process technology. The FF thus forms the basic network throughout the hierarchy of a communication system.

Please refer to Operating Instructions BA 013S/04/en "FOUNDATION Fieldbus Overview: Installation and Commissioning Guidelines" for configuration information.

System architecture

The following figure shows an example of a FOUNDATION Fieldbus™ network with the associated components.

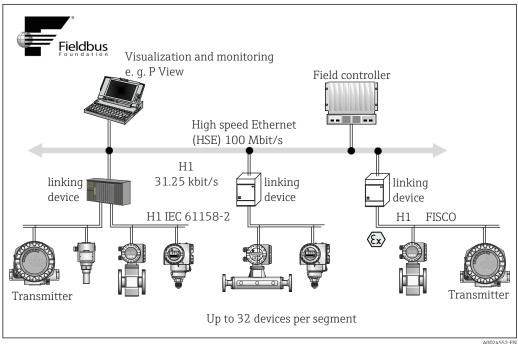

System integration via FOUNDATION Fieldbus™

HSE High Speed Ethernet H1 FOUNDATION Fieldbus-H1

System integration iTEMP TMT162

The following system connection options are possible:

■ A linking device can be used to connect to higher ranking fieldbus protocols (e.g. to the High Speed Ethernet - HSE) (Control Net).

- System inputs are available directly for H1 and H2 (HSE).
- A H1 card is required for direct connection to a process control system.

The system architecture of the FOUNDATION Fieldbus™ can be divided into two subnetworks:

H1 bus system:

In the field, fieldbus devices are connected only via the slower H1 bus system that is specified following IEC 61158-2. The H1 bus system allows simultaneous feed to the field devices and data transfer on the two-wire line. The following points describe some important characteristics of the H1 bus system:

- All fieldbus devices are powered via the H1 bus. Like the fieldbus devices, the power supply is connected in parallel to the bus line. Devices requiring external power must use a separate power supply.
- One of the most common network structures is the line structure. Star, tree or mixed network structures are also possible using connecting components (junction boxes).
- The bus connection to the individual fieldbus devices is achieved by means of a T-connector or via a spur. This has the advantage that individual fieldbus devices can be connected or disconnected without interrupting the bus or the bus communication.
- The number of connected fieldbus devices depends on various factors, such as use in hazardous areas, length of spur, cable types, current consumption of field devices etc.
 → ≅ 15
- If using fieldbus devices in a hazardous area, the H1 bus must be equipped with an intrinsically safe barrier before the transition to the hazardous area.
- A bus terminator is required at each end of the bus segment.

High Speed Ethernet (HSE):

The superior H2 bus system is realized via the High Speed Ethernet (HSE) with a transmission rate of max. 100 MBit/s. This serves as the 'backbone' (basic network) between various local sub-networks and/or where there is a large number of network users.

Link Active Scheduler (LAS)

The FOUNDATION Fieldbus™ works according to the 'producer-consumer' relationship. This provides various advantages. Data can be directly exchanged between field devices, e.g. a sensor and an actuating valve. Each bus user 'publishes' its data on the bus and all the bus users configured accordingly obtain this data. Publication of this data is carried out by a 'bus administrator' known as the 'Link Active Scheduler', which controls the sequence of bus communication centrally. The LAS organizes all the bus activities and sends appropriate commands to the individual field devices.

Other tasks of the LAS are:

- Recognition and reporting of newly connected devices.
- Reporting the removal of devices no longer communicating with the fieldbus.
- Keeping the 'Live List'. This list, in which all the fieldbus users are recorded, is checked by the LAS regularly. If devices are logged on or logged off, the "Live List" is updated and sent immediately to all the devices.
- Requesting process data from the field devices in accordance with a fixed schedule.
- Allocation of send rights (tokens) to devices between the untimed data transfer.

The LAS can be run redundantly, i.e. it exists both in the process control system and in the field device. If one LAS fails, the other LAS can accurately take over communication. Through precise timing of the bus communication via the LAS, the FF can run exact processes at regular intervals.

Fieldbus devices, such as this transmitter, which can take over the LAS function in the event of failure of the primary master, are called 'Link Masters'. In contrast, 'Basic Devices' can only receive signals and send them to the central process control system. The LAS function is deactivated in this transmitter when the unit is delivered.

iTEMP TMT162 System integration

Data transfer

We distinguish between two types of data transfer:

 Scheduled data transfer (cyclic): all time-critical process data (i.e. continuous measurement or actuating signals) are transferred and processed in accordance with a fixed schedule.

 Unscheduled data transfer (acyclic): device parameters that are not time-critical for the process and diagnosis information are only transferred to the fieldbus when needed. This data transfer is always carried out in the intervals between timed communication.

Device ID, addressing

Within the FF network, each fieldbus device is identified by a unique device ID (DEVICE_ID). The fieldbus host system (LAS) automatically gives the network address for this to the field device. The network address is the address that the fieldbus currently uses.

Der FOUNDATION Fieldbus™ uses addresses between 0 to 255:

- Groups/DLL: 0 to 15
- Devices in operation: 20 to 35
- Reserve devices 232 to 247
- Offline/substitute devices: 248 to 251

The field device tag name (PD_TAG) is given to the device in question during commissioning. It remains stored in the device even during a supply voltage failure.

Function blocks $\rightarrow \triangleq 80$

The FOUNDATION FieldbusTM uses predefined function blocks to describe the functions of a device and to specify uniform data access. The function blocks implemented in each fieldbus device provide information on the tasks which a device can accept in the whole of the automation strategy.

In the case of sensors these are typically the following blocks:

- 'Analog Input' or
- 'Discrete Input' (digital input)

Actuating valves normally have the function blocks:

- 'Analog Output' or
- 'Discrete Output' (digital output)

For control tasks there are the blocks:


- PD controller or
- PID controller

Fieldbus based process control

With the FOUNDATION FieldbusTM field devices can carry out simple process control functions themselves, thereby relieving pressure on the superior process control system. Here the Link Active Scheduler (LAS) coordinates data exchange between the sensor and controller and makes sure that two field devices cannot access the bus at the same time. To do this, configuration software such as the NI-FBUS Configurator from National Instruments is used to connect the various function blocks to the desired control strategy – generally graphically.

Use as display unit in FOUNDATION Fieldbus™

System integration iTEMP TMT162

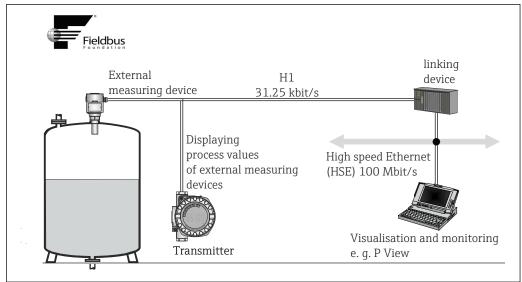

A0024553-EN

 \blacksquare 13 Displaying process values of external devices.

iTEMP TMT162 Commissioning

8 Commissioning

8.1 Function check

Before commissioning the measuring point make sure that all final checks have been carried out:

- Checklist "Post-installation check", \rightarrow 🗎 14
- Checklist "Post-connection check", $\rightarrow \triangleq 21$

8.2 Switching on the transmitter

Switch on the supply voltage after completing the final checks. The device is ready for operation after approx. 20 seconds! The transmitter performs a number of internal test functions after power-up. As this procedure progresses, the following sequence of messages appears on the local display:

Step	Display	
1	All segments on	
2	All segments off	
3	Manufacturer data and device name are displayed	
4	Current firmware version is displayed	
5	Current device revision is displayed	
6a	The current measured value is displayed. Bar graph displays the % value within the set bar graph range	
6b	The current status message is displayed. If the switch-on procedure fails, the appropriate status message is displayed, depending on the cause.	
	If the switch-on procedure is not successful, the relevant diagnostics event, depending on the cause, is displayed. A detailed list of diagnostic events and the corresponding troubleshooting instructions can be found in the "Diagnostics and troubleshooting" section .	

Normal measuring mode commences as soon as the switch-on procedure is completed. Various measured value and/or status variables appear on the display.

8.3 Commissioning

Please note the following:

- In the case of the FOUNDATION™ Fieldbus, the device is identified in the host or configuration system by means of the device ID (DEVICE_ID). The DEVICE_ID is a combination of the manufacturer ID, device type and device serial number. It is unique and can never be assigned twice. The DEVICE_ID of the device is composed as follows: DEVICE_ID = 452B4810CC-XXXXXXXXXXXX 452B48 = Endress+Hauser 10CC = TMT162 XXXXXXXXXXX = device serial number (11-digit)
- If you wish to configure the transmitter quickly but safely, configuration wizards can guide you through the menus and help you configure the most important parameters in the Transducer Blocks. For this, refer to the operating manual of your operating and configuration software.

Commissioning iTEMP TMT162

Configuration wizards

Name	Block	Description
Quick Setup	Sensor Transducer	Configuration of the sensor input with the data relevant to the sensor.
	Display Transducer	Menu-guided configuration of the display unit.
Set to OOS mode	Resource, Sensor Transducer, Display Transducer, AdvDiagnostic Transducer, AI, PID and ISEL	Sets the block to the "Out Of Service" mode.
Set to Auto mode	Resource, Sensor Transducer, Display Transducer, AdvDiagnostic Transducer, AI, PID and ISEL	Sets the block to the "Auto" mode.
Restart	Resource	Restarts the device with different options as to which particular parameters should be reset to the factory settings.
Sensor Drift Monitoring Configuration	AdvDiagnostic Transducer	Settings for drift or differential monitoring with 2 connected sensors.
Calc.wizard for 2- wire compensation value	Sensor Transducer	Calculation of the conductor resistance for 2-wire compensation.

Calibration wizards

Name	Block	Description
User Sensor Trim Configuration	Sensor Transducer	Menu guidance for linear scaling (offset + slope) for adapting the measuring point to the process. → 🖺 71
Factory Trim settings	Sensor Transducer	Resets scaling to the "factory standard trim" . $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
RTD Platinum Configuration Call Van Dusen	Sensor Transducer	Entry of Callendar-Van-Dusen coefficients.
RTD Copper Configuration	Sensor Transducer	Entry of coefficients for nickel polynomial.
RTD Nickel Configuration	Sensor Transducer	Entry of coefficients for copper polynomial.

Initial commissioning

The following description takes you step-by-step through commissioning the device and all the necessary configurations for the FOUNDATION Fieldbus:

- 1. Switch on the device
- 2. Note the DEVICE_ID on the device nameplate
- 3. Open the configuration program
- 4. Load the device description files or the CFF file into the host system or the configuration program. Make sure you are using the right system files. $\rightarrow \triangleq 27$
 - → The first time you establish a connection, the device reacts as follows:

EH_TMT162_ xxxxxxxxxxx (tag name PD-TAG)


452B4810CC- xxxxxxxxxx (DEVICE ID)

iTEMP TMT162 Commissioning

Block structure:

Display text (xxx = serial number)	Base index	Description
RS_xxxxxxxxxx	400	Resource Block
TB_S1_xxxxxxxxxxx	500	Transducer Block temperature sensor 1
TB_S2_xxxxxxxxxxx	600	Transducer Block temperature sensor 2
TB_DISP_xxxxxxxxxxx	700	Transducer Block "Display"
TB_ADVDIAG_xxxxxxxxxxx	800	Transducer Block "Advanced Diagnostic"
AI_1_ xxxxxxxxxx	900	Analog Input function block 1
AI_2_xxxxxxxxxx	1000	Analog Input function block 2
AI_3_ xxxxxxxxxx	1100	Analog Input function block 3
PID_ xxxxxxxxxx	1200	PID function block
ISEL_xxxxxxxxxx	1300	Input Selector function block

- The device is delivered from the factory with the bus address "247" and is therefore in the 232-247 address range which is reserved for reserve devices. A lower bus address should be assigned to the device for commissioning.
- ▶ Using the DEVICE_ID noted, identify the field device and assign the desired tag name (PD_TAG) to the fieldbus device in question. Factory setting: EH_TMT162_xxxxxxxxxx (xxx... = serial number).

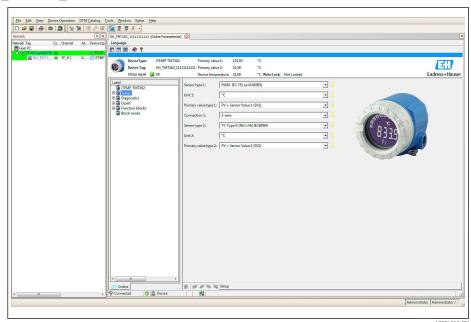

■ 14 Screen display in Endress+Hauser's FieldCare asset management system

Configuring the "Resource Block" (base index 400)

- 1. Open the Resource Block.
- 2. When the device is delivered, the hardware write protection is disabled so the write parameters can be accessed via the FF. Check the status via the WRITE_LOCK parameter:
 - → Write protection enabled = LOCKED
 - Write protection disabled = NOT LOCKED
- 3. Disable the write protection if necessary. $\rightarrow \triangle$ 23

Commissioning iTEMP TMT162

4. Enter the desired name for the block (optional). Factory setting: RS_xxxxxxxxxx. Set the operating mode in the MODE_BLK parameter group (TARGET parameter) to AUTO.

Configuring the "Transducer Blocks"

The individual Transducer Blocks comprise various parameter groups arranged by device-specific functions:

- Temperature sensor $1 \rightarrow$ Transducer Block "TB_S1_xxxxxxxxxxx" (base index: 500)
- Temperature sensor 2 → Transducer Block "TB_S2_xxxxxxxxxxx" (base index: 600)
- Local display functions → Transducer Block "TB_DISP_xxxxxxxxxx" (base index: 700)
- Advanced diagnostics → Transducer Block "TB_ADVDIAG_xxxxxxxxxx" (base index: 800)
- Enter the desired name for the block (optional). For factory settings, see the table above. Set the operating mode in the MODE_BLK parameter group (TARGET parameter) to AUTO.

Configuring the "Analog Input function blocks"

The device has 2×1 three Analog Input function blocks which can be assigned to the different process variables as desired. The following section describes an example for the Analog Input function block 1 (base index 900).

- 1. Enter the required name for the Analog Input function block (optional). Factory setting: AI_1_xxxxxxxxxx
- 2. Open Analog Input function block 1.
- 3. Set the operating mode in the MODE_BLK parameter group (TARGET parameter) to OOS, i.e. the block is out of service.
- 4. Use the CHANNEL parameter to select the process variable which should be used as the input value for the function block algorithm (scaling and limit value monitoring functions).
 - The following settings are possible:
 CHANNEL → Uninitialized / Primary Value 1 / Primary Value 2 / Sensor Value 1 / Sensor Value 2 / Device temperature
- 5. In the XD_SCALE parameter group, select the desired engineering unit which should be transmitted by means of the FOUNDATION Fieldbus interface, as well as the block input range for the process variable in question.
- Make sure that the engineering unit selected suits the measured variable of the process variable chosen. Otherwise, the BLOCK_ERROR parameter displays the "Block Configuration Error" error message and the operating mode of the block cannot be set to AUTO.
- In the L_TYPE parameter, select the type of linearization for the input variable (direct, indirect, indirect sq. root).
- Please note that if the "Direct" linearization type is selected, the settings in the OUT_SCALE parameter group are not taken into account. The engineering units selected in the XD_SCALE parameter group are decisive.

Use the following parameters to define the limit values for the alarm and warning messages:

- HI HI LIM \rightarrow Limit value for the upper alarm
- HI LIM → Limit value for the upper warning
- LO LIM → Limit value for the lower warning
- LO LO LIM → Limit value for the lower alarm
- 1. The limit values entered must be within the value range specified in the OUT_SCALE parameter group.


iTEMP TMT162 Commissioning

2. In addition to the actual limit values, the behavior in the event of limit value overshoot must be specified by "alarm priorities" (HI_HI_PRI, HI_PRI, LO_PR, LO_LO_PRI parameters). → ♠ 76 Reporting to the fieldbus host system only occurs if the alarm priority is greater than 2. In addition to the settings for the alarm priorities, digital outputs can be defined for limit value monitoring. These outputs (HIHI_ALM_OUT_D, HI_ALM_OUT_D, LOLO_ALM_OUT_D, LO_ALM_OUT_D parameters) then switch from 0 to 1 when the specific limit value is exceeded. The general alarm output (ALM_OUT_D parameter) in which different alarms can be grouped must be configured appropriately via the ALM_OUT_D_MODE parameter. The behavior of the output in the event of an error must be configured in the parameter Fail Safe Type (FSAFE_TYPE) and if FSAFE_TYPE = "Fail Safe Value" is selected, the value to be output must be defined in the parameter Fail Safe Value (FSAFE_VALUE).

Alarm limit value:	HIHI_ALM_OUT_ D	HI_ALM_OUT_D	LOLO_ALM_OUT_	LO_ALM_OUT_D
PV ≥ HI_HI_LIM	1	х	х	х
PV < HI_HI_LIM	0	х	х	х
PV ≥ HI_LIM	х	1	х	х
PV < HI_LIM	х	0	х	х
PV > LO_LIM	х	х	0	х
PV ≤ LO_LIM	х	х	1	х
PV > LO_LO_LIM	х	х	х	0
PV ≤ LO_LO_LIM	х	х	х	1

System configuration / connecting function blocks

A final "overall system configuration" is necessary so that the operating mode of the Analog Input function block can be set to AUTO and the field device is integrated in the system application. For this purpose, configuration software, e.g. Endress+Hauser NI-FBUS Configurator from National Instruments, is used to connect the function blocks to the desired control strategy (mostly using graphic display) and then the time for processing the individual process control functions is specified.

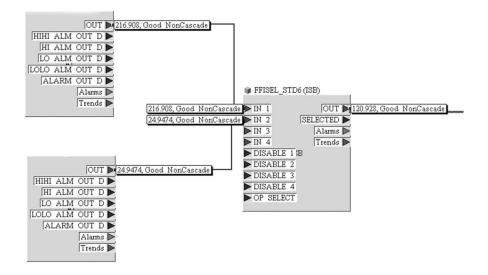

A000823

© 15 Connecting function blocks with the aid of the "NI-FBUS Configurator". Example: Averaging (output OUT in the Input Selector Block) of two temperature inputs (OUT in the Analog Input Blocks 1 and 2).

Commissioning iTEMP TMT162

1. Once you have specified the active LAS, download all the data and parameters to the field device.

2. – The function blocks are correctly connected to one another. The Resource Block is in the AUTO operating mode.

Set the operating mode in the MODE_BLK parameter group (TARGET parameter) to $\overline{\rm AUTO}$

Diagnostics and troubleshooting 9

9.1 General troubleshooting

9.1.1 **Troubleshooting instructions**

Always start troubleshooting with the checklists below if faults occur after start up or during operation. This takes you directly (via various queries) to the cause of the problem and the appropriate remedial measures.



In the event of a serious fault, a device might have to be returned to the manufacturer for repair. Refer to the "Return" section before returning the device to Endress+Hauser. → <a>\bar{1}{2} 47

Check display (local display)		
No display visible - No connection to the FF host system.	 Check the supply voltage → terminals + and - Measuring electronics defective → order spare part → \(\begin{align*} \begin{align*} \text{45} \\ \end{align*} 	
No display visible - However, connection has been established to the FF host system.	1. Check whether the retainers of the display module are correctly seated on the electronics module → 🖺 14 2. Display module defective → order spare part → 🖺 45 3. Measuring electronics defective → order spare part → 🖺 45	

 \blacksquare

Local error messages on the display	
→ 🖺 40	

lacksquare

Faulty connection to the fieldbus host system		
No connection can be made between the fieldbus host system and the device. Check the following points:		
Fieldbus connection	Check data lines	
Fieldbus connector (optional)	Check pin assignment / wiring. → 🖺 19	
Fieldbus voltage	Check that a min. bus voltage of 9 V DC is present at the +/- terminals. Permissible range: 9 to 32 V DC	
Network structure	Check permissible fieldbus length and number of spurs. $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Basic current	Is there a basic current of min. 11 mA?	
Terminating resistors	Has the FOUNDATION Fieldbus network been terminated correctly? Each bus segment must always be terminated with a bus terminator at both ends (start and finish). Otherwise there may be interference in communication.	
Current consumption, permissible feed current	Has the FOUNDATION Fieldbus network been terminated correctly? Each bus segment must always be terminated with a bus terminator at both ends (start and finish). Otherwise there may be interference in communication.	

 \blacksquare

Error messages in the FOUNDATION™ Fieldbus configuration program	
→ 🖺 41	

ţ

Problems when configuring function	on blocks
Transducer Blocks: The operating mode cannot be set to AUTO.	Check whether the operating mode of the Resource Block is set to AUTO. → MODE_BLK parameter group / TARGET parameter.
	Make sure that the unit selected suits the process variable chosen in the SENSOR_TYPE parameter. Otherwise the BLOCK_ERROR parameter displays the "Block Configuration Error" error message. In this state, the operating mode cannot be set to AUTO.
Analog Input function block: The operating mode cannot be set to AUTO.	There can be several reasons for this. Check the following points one after another: Check whether the operating mode of the Analog Input function block is set to AUTO: MODE_BLK parameter group / TARGET parameter. If not and the mode cannot be changed to AUTO, first check the following points. Check the BLOCK_ERR parameter for a configuration error. In this case, read the BLOCK_ERR_DESC_1 parameter which contains the reason for the configuration error. Make sure that the CHANNEL parameter (select process variable) has already been configured in the Analog Input function block. The option CHANNEL = 0 (uninitialized) is not valid. Make sure that the XD_SCALE parameter group (input range, unit) has already been configured in the Analog Input function block. Make sure that the L_TYPE parameter (linearization type) has already been configured in the Analog Input function block. Check whether the operating mode of the Resource Block is set to AUTO. MODE_BLK parameter group / TARGET parameter. Make sure that the function blocks are correctly connected together and that this system configuration has been sent to the fieldbus users. A detailed description of the Analog Input (AI) function block can be found in the FOUNDATION Fieldbus™ Function Blocks manual (BA00062S/04).
Analog Input function block: Although the operating mode is set to AUTO, the status of the AI output value OUT is "BAD" or "UNCERTAIN".	Check whether an error is pending in the Transducer Block "Advanced Diagnostic" → Transducer Block "Adv. Diagnostic" → "Actual Status Category" and "Actual Status Number' parameters.
 Parameters cannot be changed or No write access to parameters 	 → Parameters that only show values or settings cannot be changed (these are read-only parameters)! → The hardware write protection is enabled. Disable the write protection. → 🖹 23 Via the WRITE_LOCK parameter in the Resource Block, you can check whether hardware write protection is enabled or disabled: LOCKED = write protection on (enabled) UNLOCKED = no write protection (disabled) → The block operating mode is set to the wrong mode. Certain
	parameters can only be modified in the OOS (out of service) or MAN (manual) mode. Set the measuring mode of the block to the required mode → MODE_BLK parameter group. → The value entered is outside the specified input range for the parameter in question: Enter a suitable value, increase the input range if necessary

Problems when configuring function blocks		
Transducer Blocks: The manufacturer-specific parameters are not visible.	The device description file (Device Description, DD) has not yet been loaded to the host system or the configuration program? Download the file to the configuration system. $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
	Make sure you are using the correct system files for integrating field devices into the host system. You can access version information in the transmitter using the following functions/ parameters: FOUNDATION Fieldbus interface: − Resource Block → DD_REV parameter Example: Display in the DEV_REV → 01 parameter Display in the DD_REV parameter → 01 Device description file (DD) required → 0101.sym / 0101.ffo	
Analog Input function block: The output value OUT is not updated despite a valid "GOOD" status.	Simulation is active \rightarrow Deactivate simulation by means of the SIMULATE parameter group.	

9.1.2 Corrosion detection

Corrosion monitoring is only possible for RTDs with a 4-wire connection and thermocouples.

Sensor connection cable corrosion can lead to false measured value readings. Therefore the unit offers the possibility of recognizing any corrosion before a measured value is affected.

The corrosion setting is configured in the CORROSION_DETECTION parameter:

- Off: diagnostic event 041 sensor failure (default category: F) is output when the alarm limit is reached.
- On: diagnostic event 042 sensor corrosion (default category: M) is output before the alarm limit is reached. This allows preventative maintenance/troubleshooting to be performed. An alarm message is output as of the alarm limit.

Corrosion detection is configured via the field diagnostic parameters in the Transducer $\operatorname{Block} \to \boxminus$ 76. Depending on the configuration of diagnostic event 042 - "sensor corrosion", you configure which category is output in the event of corrosion. If corrosion detection is disabled, an F-041 error is output only after the alarm limit is reached. The following table describes how the device behaves in the as-delivered state when the resistance in a sensor connection cable changes, depending on whether on or off is displayed in the parameter.

RTD 1)	≤ 2 kΩ	$2 k\Omega \le x \le 3 k\Omega$	≥ 3 kΩ
off	-	No alarm	No alarm
on	-	WARNING (M042)	ALARM (F041)

1) Pt100 = 100 Ω at 0 °C / Pt1000 = 1000 Ω at 0 °C

TC	≤ 10 kΩ	$10 \ k\Omega \le x \le 15 \ k\Omega$	≥ 15 kΩ
off	-	No alarm	No alarm
on	-	WARNING (M042)	ALARM (F041)

The sensor resistance can affect the resistance data in the table. If all the sensor connection cable resistances are increased at the same time, the values given in the table are halved. The corrosion detection system presumes that this is a slow process with a continuous increase in the resistance.

9.1.3 Application errors without messages

Application errors without status messages for RTD sensor connection

Problem	Possible cause	Remedy
	Incorrect sensor orientation.	Install the sensor correctly.
	Heat conducted by sensor.	Observe the face-to-face length of the sensor.
	Device programming is incorrect (number of wires).	Change the Connection type device function.
	Device programming is incorrect (scaling).	Change scaling.
	Incorrect RTD configured.	Change the Sensor type device function.
Measured value is incorrect/	Sensor connection.	Check that the sensor is connected correctly.
inaccurate	The cable resistance of the sensor (two-wire) was not compensated.	Compensate the cable resistance.
	Offset incorrectly set.	Check offset.
	Faulty sensor.	Check the sensor.
	RTD connected incorrectly.	Connect the connecting cables correctly (terminal diagram).
	Incorrect programming.	Incorrect sensor type set in the SENSOR_TYPE device function. Select the right sensor type.
	Device defective.	Replace device

Application errors without status messages for TC sensor connection

Problem	Possible cause	Remedy
	Incorrect sensor orientation.	Install the sensor correctly.
	Heat conducted by sensor.	Observe the face-to-face length of the sensor.
	Device programming is incorrect (scaling).	Change scaling.
	Incorrect thermocouple type (TC) configured.	Change the SENSOR_TYPE device function.
Measured value is incorrect/	Incorrect comparison measuring point set.	Set the correct reference junction. → 🗎 73
inaccurate	Interference via the thermocouple wire welded in the thermowell (interference voltage coupling).	Use a sensor where the thermocouple wire is not welded.
	Sensor is connected incorrectly.	Connect the sensor correctly as per the terminal diagram (polarity).
	Faulty sensor.	Check sensor
	Incorrect programming.	Incorrect sensor type set in the SENSOR_TYPE device function. Change to the right sensor type.
	Device defective.	Replace device.

9.2 Diagnostic information on local display

The device displays warnings or alarms as status messages. If errors occur during commissioning or measuring operation, these errors are displayed immediately. This takes

place on the local display by means of the error message saved in the device and in the configuration program by means of the parameter in the Transducer Block: Advanced Diagnostic. A distinction is made here between the following 4 status categories:

Status signals


Symbol	Event category	Meaning
F	Operating error	An operating error has occurred. The measured value is no longer valid.
C	Service mode	The device is in service mode (e.g. during a simulation).
S	Out of specification	The device is being operated outside its technical specifications (e.g. during startup or a cleaning).
М	Maintenance required	Maintenance is required. The measured value is still valid.

Diagnostic behavior

Alarm	The device cannot continue measuring with the "F" status message, except a backup sensor is configured, which provides a valid value. $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Warning	With "M", "C" and "S" status messages, the device tries to continue measuring (uncertain measurement!). Alternating with the selected measured values, the status including the defined error number (7-segment display) is shown on the display. Moreover the ' \triangle ' symbol is permanently displayed. $\rightarrow \cong 22$	

In both instances, the 14-segment display outputs the sensor that generates the status, e.g. 'SENS1', 'SENS2'. If nothing is displayed on the 14-segment display, the status message does not refer to a sensor but refers to the device itself.

Diagnostic event and event text: The fault can be identified by means of the diagnostic event. The event text helps you do so by providing information about the fault.

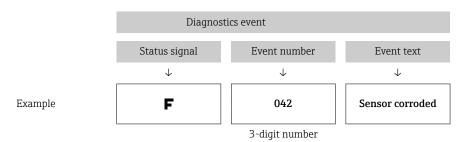

9.3 Overview of diagnostic information

Abbreviations for output variables:

SV1 = Sensor value 1

SV2 = Sensor value 2

PV1 = Primary value 1

PV2 = Primary value 2

DT = Device temperature

Default category	No.	Status messages - ACTUAL_STATUS_NUMBER in the 'Advanced Diagnostics' Transducer Block - Local display	Error messages in the Sensor Transducer Block in question	Sensor Transducer Block measured value status (default)	Cause of error / remedy	Output variables affected
F-	041	Device status message (FF): sensor cable open circuit F-041 Local display: F-041 ↔ measured value or ''	BLOCK_ERR = Other I Input Failure Transducer_Error = Mechanical failure	QUALITY = BAD SUBSTATUS = Sensor failure	Cause of error: 1. Electr. interruption of sensor or sensor wiring. 2. Incorrect setting for type of connection in the SENSOR_ CONNECTION parameter. Remedy: Re 1.) Reestablish electr. connection or	SV1, SV2, also PV1, PV2 depending on the configuratio n
M-	042	Device status message (FF): Sensor corrosion M-042 Local display: M-042 ↔ measured value	BLOCK_ERR = Other	QUALITY = UNCERTAIN (configurable)	replace sensor. Re 2.) Configure correct type of connection. Cause of error: Corrosion detected on the sensor terminals. Remedy: Check wiring and replace if necessary.	SV1, SV2, also PV1, PV2 depending
		incubated value	Transducer_Error = No error	SUBSTATUS = Sensor conversion not accurate	necessary.	on the configuratio
F-	043	Device status message (FF): Sensor short-circuit F-043 Local display: F-043 ↔ measured value or ''	BLOCK_ERR = Other I Input Failure	QUALITY = BAD	Cause of error: Short circuit detected at the sensor terminals. Remedy: Check sensor and sensor wiring.	SV1, SV2, also PV1, PV2 depending
			Transducer_Error = Mechanical failure	SUBSTATUS = Sensor failure		on the configuratio n
M-	101	Device status message (FF): Sensor limit undershot M-101 Local display: M-101 ↔ measured value	BLOCK_ERR = Other Transducer_Error = No error	QUALITY = UNCERTAIN SUBSTATUS = Sensor conversion not accurate	Cause of error: Physical measuring range undershot. Remedy: Select suitable sensor type.	SV1, SV2, also PV1, PV2 depending on the configuratio n
M-	102	Device status message (FF): Sensor limit overshot M-102 Local display: M-102 ↔ measured value	BLOCK_ERR = Other Transducer_Error = No error	QUALITY = UNCERTAIN SUBSTATUS = Sensor conversion not accurate	Cause of error: Physical measuring range overshot. Remedy: Select suitable sensor type.	SV1, SV2, also PV1, PV2 depending on the configuratio n
M-	103	Device status message (FF): Sensor drift/difference M-103 Local display: M-103 ↔ measured value	BLOCK_ERR = Other Transducer_Error = No error	QUALITY = UNCERTAIN (configurable) SUBSTATUS = Non- specific	Cause of error: Sensor drift has been detected (in accordance with the settings in the Advanced Diagnostics Block). Remedy: Check the sensor, depending on the application.	PV1, PV2 SV1, SV2
M-	104	Device status message (FF): Backup active M-104 Local display: M-104 ↔ measured value	BLOCK_ERR = Other Transducer_Error = No error	QUALITY = GOOD / BAD SUBSTATUS = Non- specific	Cause of error: Backup function activated and an error was detected at one sensor. Remedy: Rectify the sensor error.	SV1, SV2, also PV1, PV2 depending on the configuratio n
F-	221	Device status message (FF): Reference measurement F-221 Local display: F-221 ↔ measured value or ''	BLOCK_ERR = Other Transducer_Error = General error	QUALITY = BAD SUBSTATUS = Device failure	Cause of error: Internal reference junction defective. Remedy: Device defective, replace.	SV1, SV2, PV1, PV2, DT

Default category	No.	Status messages - ACTUAL_STATUS_NUMBER in the 'Advanced Diagnostics' Transducer Block - Local display	Error messages in the Sensor Transducer Block in question	Sensor Transducer Block measured value status (default)	Cause of error / remedy	Output variables affected
F-	261	Device status message (FF): Device electronics F-261 Local display: F-261 ↔	BLOCK_ERR = Other	QUALITY = BAD	Cause of error: Error in the electronics. Remedy: Device defective, replace	SV1, SV2, PV1, PV2, DT
		measured value or ''	Transducer_Error = Electronic failure	SUBSTATUS = Device failure		
F-	283	Device status message (FF): Memory error F-283	BLOCK_ERR = Other	QUALITY = BAD	Cause of error: Error in memory. Remedy: Device defective, replace.	SV1, SV2, PV1, PV2,
		Local display: F-283 ↔ measured value or ''	Transducer_Error = Data integrity error	SUBSTATUS = Device failure		DT
C-	402	Device status message (FF): Device initialization C-402	BLOCK_ERR = Power up	QUALITY = UNCERTAIN	Cause of error: Device starting/initializing. Remedy: Message is only displayed in the	SV1, SV2, PV1, PV2,
		Local display: Measured value	Transducer_Error = Data integrity error	SUBSTATUS = Non- specific	transducer block during power-up. 1)	DT
F-	431	Device status message (FF): Calibration values F-431	BLOCK_ERR = Other	QUALITY = BAD	Cause of error: Error in calibration parameters.	SV1, SV2, PV1, PV2, DT
		Local display: F-431 ↔ measured value or ''	Transducer_Error = Calibration error	SUBSTATUS = Device failure	Remedy: Device defective, replace.	
F-	437	Device status message (FF): Configuration error F-437 Local display: F-437 ↔ measured value or ''	BLOCK_ERR = Other I Block configuration error	QUALITY = BAD	Cause of error: Incorrect configuration in the Transducer Blocks "Sensor 1 and 2". The reason for the configuration error is displayed in the "BLOCK_ERR_DESC1" parameter. Remedy: Check the configuration of the sensor types used, the units and the settings of PV1 and/or PV2.	SV1, SV2, PV1, PV2, DT
			Transducer_Error = Configuration error	SUBSTATUS = Device failure		
C-	482	Device status message (FF): Simulation active C-482	BLOCK_ERR = Other	QUALITY = UNCERTAIN	Cause of error: Simulation is active. Remedy: -	
		Local display: C-482 ↔ measured value	Transducer_Error = No error	SUBSTATUS = Substitute		
C-	501	Device status message (FF): Device reset C-501 Local display: C-501 ↔	BLOCK_ERR = Other	QUALITY = UNCERTAIN / GOOD	Cause of error: Device reset is performed. Remedy: Message is only displayed during reset.	SV1, SV2, PV1, PV2, DT
		measured value	Transducer_Error = No error	SUBSTATUS = Non- specific/ update event		
S-	502	Device status message (FF): Linearization S-502 Local display: S-502 ↔ measured value	BLOCK_ERR = Other I Block configuration error	QUALITY = BAD	Cause of error: Error in linearization. Remedy: Select valid type of linearization (sensor type).	SV1, SV2, PV1, PV2, DT
			Transducer_Error = Configuration error	SUBSTATUS = Configuration error		
S-	901	Device status message (FF): Ambient temperature range undershot S-901	BLOCK_ERR = Other	QUALITY = UNCERTAIN (configurable)	Cause of error: Device temperature < -40 °C (-40 °F) Remedy: Observe ambient temperature in	SV1, SV2, PV1, PV2, DT
		Local display: S-901 ↔ measured value	Transducer_Error = No error	SUBSTATUS = Non- specific	accordance with specification.	

Maintenance iTEMP TMT162

Default category	No.	Status messages - ACTUAL_STATUS_NUMBER in the 'Advanced Diagnostics' Transducer Block - Local display	Error messages in the Sensor Transducer Block in question	Sensor Transducer Block measured value status (default)	Cause of error / remedy	Output variables affected
S-	902	Device status message (FF): Ambient temperature range overshot S-902 Local display: S-902 ↔ measured value	BLOCK_ERR = Other Transducer_Error = No error	QUALITY = UNCERTAIN (configurable) SUBSTATUS = Non- specific	Cause of error: Device temperature > +85 °C (+185 °F). Remedy:Observe ambient temperature in accordance with specification.	SV1, SV2, PV1, PV2, DT

¹⁾ Status message is never displayed on local display.

9.4 Firmware history and overview of compatibility

Revision history

The firmware version (FW) on the nameplate and in the Operating Instructions indicates the device release: XX.YY.ZZ (example 01.02.01).

XX Change to main version. No longer compatible. The device and

Operating Instructions change.

YY Change to functions and operation. Compatible. The Operating

Instructions change.

ZZ Fixes and internal changes. No changes to the Operating Instructions.

Date	Firmware Version	Modifications	Documentation
01/2006	1.00.00	Original firmware	BA224R/09/en/11.06
08/2010	1.01.00	New device revision 2	BA224R/09/en/13.10
08/2010	1.01.00	-	BA224R/09/en/14.12
12/2014	2.00.00	New device revision 3	BA00224R/09/en/15.15

10 Maintenance

No special maintenance work is required for the temperature transmitter.

10.1 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

iTEMP TMT162 Repair


11 Repair

11.1 General notes

Repairs that are not described in these Operating Instructions must only be carried out directly by the manufacturer or by the service department.

11.2 Spare parts

Spare parts currently available for the product can be found online at: http://www.products.endress.com/spareparts_consumables. Always quote the serial number of the device when ordering spare parts!

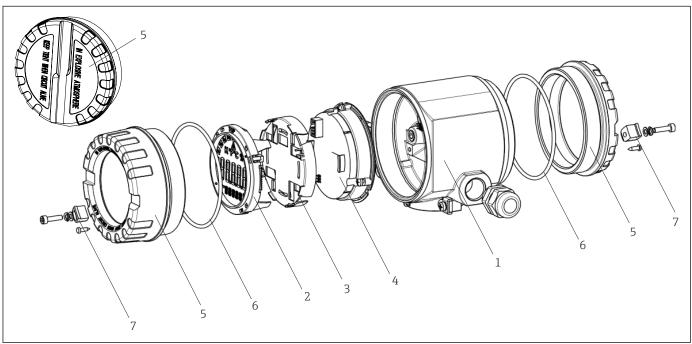

 \blacksquare 16 Field transmitter spare parts

Item No.1	Housing	Housing						
	Certificate	es:						
	A	Non-ha	azardous	area + Ex ia				
	В	ATEX I	Ex d					
		Materi	al:					
		A	Alumin	um, HART				
		В	Stainless steel 316L, HART					
		С	C T17, HART					
		F	F Aluminum, FF/PA					
		G	G Stainless steel 316L, FF/PA					
		Н	T17, FF/PA					
			Cable e	entry:				
			1	2 x thread NPT ½" + terminal block + 1 dummy plug				
			2	2 x thread M20x1.5 + terminal block + 1 dummy plug				

Endress+Hauser 45

A002455

Repair iTEMP TMT162

Item No.1	Housing			
		4	2 x thre	ead G ½" + terminal block + 1 dummy plug
			Version	n:
			A	Standard
TMT162G-			Α	← order code

Item No. 4	Electr	Electronics			
	Certif	icates:			
	Α	Non-ha	azardous	area	
	В	ATEX I	Ex ia, FM	I IS, CSA IS	
		Sensor	input; o	communication:	
		A	1x; HA	RT	
		В	2x; con	fig. output sensor 1, HART	
		С	2x; FO	UNDATION Fieldbus Device Revision 1	
		D	2x; PR0	DFIBUS PA	
		E	2x; FOUNDATION Fieldbus Device Revision 2		
			Config	uration:	
			A	50 Hz mains filter	
			В	Produced as per original order (quote serial number) 50 Hz mains filter	
			K	60 Hz mains filter	
			L	Produced as per original order (quote serial number) 60 Hz mains filter	
TMT162E-				← order code	

Item No.	Order code	Spare parts
2,3	TMT162X-DA	Display HART + fitting kit + twist protection
2,3	TMT162X-DB	Display PA/FF + fitting kit + twist protection
2,3	TMT162X-DC	Display fitting kit + twist protection
5	TMT162X-HH	Housing cover blind, aluminum Ex d, FM XP with seal, CSA approval, only as cover of connection compartment
5	TMT162X-HI	Housing cover blind, aluminum + seal
5	TMT162X-HK	Housing cover cpl. display, aluminum Ex d with seal
5	TMT162X-HL	Housing cover cpl. display, aluminum with seal
5	TMT162X-HA	Housing cover blind, stainless steel 316L Ex d, ATEX Ex d, FM XP with seal, CSA approval, only as cover of connection compartment
5	TMT162X-HB	Housing cover blind, stainless steel 316L, with seal
5	TMT162X-HC	Housing cover cpl. display, Ex d, stainless steel 316L, ATEX Ex d, FM XP, CSA XP, with seal
5	TMT162X-HD	Housing cover cpl. display, stainless steel 316L, with seal
5	TMT162X-HE	Housing cover blind, T17, 316L
5	TMT162X-HF	Housing cover cpl. display, polycarbonate, T17 316L
5	TMT162X-HG	Housing cover cpl. display, glass, T17 316L
6	71158816	O-ring 88x3 EPDM70 PTFE slide coating
7	51004948	Cover clamp spare part set: screw, disk, spring washer

iTEMP TMT162 Accessories

11.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at http://www.endress.com/support/return-material

11.4 Disposal

The device contains electronic components and must, therefore, be disposed of as electronic waste in the event of disposal. Please pay particular attention to the local regulations governing waste disposal in your country.

12 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Always quote the serial number of the device when ordering accessories!

12.1 Device-specific accessories

Accessories	Description					
Dummy plugs	■ M20x1.5 EEx-d/XP ■ G ½" EEx-d/XP ■ NPT ½" ALU ■ NPT ½" V4A					
Cable glands	 M20x1.5 NPT ½" D4-8.5, IP68 NPT ½" cable gland 2 x D0.5 cable for 2 sensors M20x1.5 cable gland 2 x D0.5 cable for 2 sensors 					
Adapter for cable gland	M20x1.5 inside/M24x1.5 outside					
Wall and pipe mounting bracket	Stainless steel wall/2" pipe Stainless steel 2" pipe V4A					
Fieldbus device	Threaded connection:	Cable connection thread:				
connector (FF)	M20	7/8"				
	NPT ½"	7/8"				
Surge arrester HAW569	M20x1.5 threaded connection; suitable for HART®, FF and PA fieldbus connection Order code: HAW569-Axxx for non-hazardous area Order code: HAW569-Cxxx or -Dxxx for ATEX/IECEx approval For additional technical data, see Technical Information: TI01013K/09					

Accessories iTEMP TMT162

12.2 Communication-specific accessories

Accessories	Description
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area . For details, see Operating Instructions BA01202S
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area and the Ex area . For details, see Operating Instructions BA01202S

12.3 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: Calculation of all the necessary data for identifying the optimum measuring device: e.g. pressure loss, accuracy or process connections. Graphic illustration of the calculation results
	Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available: • Via the Internet: https://wapps.endress.com/applicator • On CD-ROM for local PC installation.
Konfigurator*temperature	Software for selecting and configuring the product depending on the measuring task, supported by graphics. Includes a comprehensive knowledge database and calculation tools: For temperature competence Quick and easy design and sizing of temperature measuring points Ideal measuring point design and sizing to suit the processes and needs of a wide range of industries
	The Konfigurator is available: On request from your Endress+Hauser sales office on a CD-ROM for local PC installation.
W@M	Life cycle management for your plant W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant device information, such as the device status, spare parts and device-specific documentation, is available for every device over the entire life cycle. The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records.
	W@M is available: Via the Internet: www.endress.com/lifecyclemanagement On CD-ROM for local PC installation.
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. For details, see Operating Instructions BA00027S and BA00059S

iTEMP TMT162 Accessories

12.4 System components

Accessories	Description
Graphic Data Manager Memograph M	The Memograph M graphic data manager provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	For details, see Technical Information TI133R/09
Paperless recorder Ecograph T	Multi-channel data recording system with LC color graphic display (120 mm / 4.7" screen size), galvanically isolated universal inputs (U, I, TC, RTD), digital input, transmitter power supply, limit relay, communication interfaces (USB, Ethernet, RS232/485), Internal flash memory and compact flash card. For details, see Technical Information TI01079R/09
RID14, RID16	8-channel field display unit with FOUNDATION Fieldbus™ or PROFIBUS® PA protocol - for easy integration into existing fieldbus systems. RID14 as version in flameproof housing. For details, see Technical Information TI00145R/09 (RID14) and
	For details, see Technical Information T100145R/09 (RID14) and T100146R/09 (RID16)

Technical data iTEMP TMT162

13 Technical data

13.1 Input

Measured variable

Temperature (temperature-linear transmission behavior), resistance and voltage.

Resistance thermometer (RTD) as per standard	Designation	α	Measuring range limits	Min. span
IEC 60751:2008	Pt100 Pt200 Pt500 Pt1000	0.003851	-200 to +850 °C (-328 to +1562 °F) -200 to +850 °C (-328 to +1562 °F) -200 to +500 °C (-328 to +932 °F) -200 to +250 °C (-328 to +482 °F)	10 K (18 °F)
JIS C1604:1984	Pt100	0.003916	-200 to +510 °C (-328 to +950 °F)	10 K (18 °F)
SAMA	Pt100	0.003923	−100 to +700 °C (−148 to +1292 °F)	10 K (18 °F)
DIN 43760 IPTS-68	Ni100 Ni120 Ni1000	0.006180	-60 to +250 °C (-76 to +482 °F) -60 to +250 °C (-76 to +482 °F) -60 to +150 °C (-76 to +302 °F)	10 K (18 °F)
GOST 6651-94	Pt50 Pt100	0.003910	-185 to +1100 °C (-301 to +2012 °F) -200 to +850 °C (-328 to +1562 °F)	10 K (18 °F)
Edison Copper Winding No.	Cu10		−100 to +260 °C (−148 to +500 °F)	10 K (18 °F)
OIML R84: 2003,	Cu50 Cu100	0.004280	-175 to +200 °C (-283 to +392 °F) -180 to +200 °C (-292 to +392 °F)	10 K (18 °F)
GOST 6651-2009	Ni100 Ni120	0.006170	-60 to +180 °C (-76 to +356 °F) -60 to +180 °C (-76 to +356 °F)	10 K (18 °F)
OIML R84: 2003, GOST 6651-94	Cu50	0.004260	−50 to +200 °C (−58 to +392 °F)	10 K (18 °F)
-	Pt100 (Callendar van Dusen) Nickel polynomial Copper polynomial	-	10 to $400~\Omega$ 10 to $2~000~\Omega$	10 Ω 10 Ω
	 Type of connection: 2-wire, 3-wire or 4-wire connection, sensor current: ≤0.3 mA With 2-wire circuit, compensation of wire resistance possible (0 to 30 Ω) With 3-wire and 4-wire connection, sensor wire resistance up to max. 50 Ω per wire 			1
Resistance transmitter	Resistance Ω		$\begin{array}{c} 10 \text{ to } 400 \ \Omega \\ 10 \text{ to } 2 \ 000 \ \Omega \\ \end{array}$	10 Ω 10 Ω

Thermocouples ¹⁾ as per standard	Designation	Measuring range limits		Min. span
IEC 60584, Part 1	Type A (W5Re-W20Re) Type B (PtRh30-PtRh6) ²⁾ Type E (NiCr-CuNi) Type J (Fe-CuNi) Type K (NiCr-Ni) Type N (NiCrSi-NiSi) Type R (PtRh13-Pt) Type S (PtRh10-Pt) Type T (Cu-CuNi)	0 to +2 500 °C (+32 to +4532 °F) +40 to +1820 °C (+104 to +3308 °F) -270 to +1000 °C (-454 to +1832 °F) -210 to +1200 °C (-346 to +2192 °F) -270 to +1372 °C (-454 to +2501 °F) -270 to +1300 °C (-454 to +2372 °F) -50 to +1768 °C (-58 to +3214 °F) -50 to +1768 °C (-58 to +3214 °F) -270 to +400 °C (-454 to +752 °F)	Recommended temperature range: 0 to +2 500 °C (+32 to +4 532 °F) +100 to +1 500 °C (+212 to +2 732 °F) 0 to +750 °C (+32 to +1 382 °F) +20 to +700 °C (+68 to +1 292 °F) 0 to +1 100 °C (+32 to +2 012 °F) 0 to +1 100 °C (+32 to +2 012 °F) 0 to +1 400 °C (+32 to +2 552 °F) 0 to +1 400 °C (+32 to +2 552 °F) -185 to +350 °C (-301 to +662 °F)	50 K (90 °F) 50 K (90 °F)
ASTM E988-96	Type C (W5Re-W26Re)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)
A31W1 E700-70	Type D (W3Re-W25Re)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)

iTEMP TMT162 Technical data

Thermocouples ¹⁾ as per standard	Designation	Measuring range limits		Min. span
DIN 43710	Type L (Fe-CuNi) Type U (Cu-CuNi)	-200 to +900 °C (-328 to +1652 °F) -200 to +600 °C (-328 to +1112 °F)	0 to +750 °C (+32 to +1382 °F) -185 to +400 °C (-301 to +752 °F)	50 K (90 °F)
	 Internal cold junction (Pt100) External cold junction: configurable value -40 to +85 °C (-40 to +185 °F) Maximum sensor wire resistance 10 kΩ (if the sensor wire resistance is greater than 10 kΩ, an error message as per NAMUR NE89 is output) ³⁾ 			
Voltage transmitter (mV)	Millivolt transmitter (mV)	-5 to 30 mV -20 to 100 mV		5 mV

- 1) When operating conditions are based on a large temperature range, the transmitter offers you the ability to split the range. For example, a Type S or R thermocouple can be used for the lower range and a Type B can be used for the upper range. The transmitter is then programmed by the end operator to switch at a predefined temperature. This allows for utilization of the best performance from each individual thermocouple and provides 1 output that represents the process temperature.
- 2) High measuring uncertainty for temperatures below 300 °C (572 °F)
- 3) Basic requirements of NE89: Detection of increased wire resistance (e.g. corrosion of contacts or wires) of TC or RTD/4-wire. Warning exceeding ambient temperature.

Type of input

The following connection combinations are possible when both sensor inputs are assigned:

			Sensor	input 1	
Sensor input 2		RTD or resistance transmitter, two-wire	RTD or resistance transmitter, three-wire	RTD or resistance transmitter, four-wire	Thermocouple (TC), voltage transmitter
	RTD or resistance transmitter, two-wire	Ø	V	-	Ø
	RTD or resistance transmitter, three- wire	V	Ø	-	Ø
	RTD or resistance transmitter, four-wire	-	-	-	-
	Thermocouple (TC), voltage transmitter	☑	V	☑	V

13.2 Output

Output signal	Signal encoding	FOUNDATION Fieldbus™ H1, IEC 61158-2, Manchester Bus Powered (MBP)
	Data transmission rate	31.25 kBit/s, voltage mode
	Galvanic isolation	U = 2 kV AC (input/output)
Failure information	Status message in accordance with FOUNDATION Fieldbus™ specification	
Linearization/transmission behavior	Temperature-linear, resistance-linear, voltage-linear	
Filter	1st order digital filter: 0 to 60 s	

Technical data iTEMP TMT162

Protocol-specific data	Supported functions	Instantiation of function blocks. The formula Quick Setup User sensor trim Factory trim settings Callendar Van Dusen Nickel/copper polynomial linearizat Sensor drift detection For detailed descriptions, see the speci	ion	
	Basic data	For detailed descriptions, see the speci	nic Operating instructions.	
	Manufacturer ID	452B48 (Endress+Hauser)		
		10CC (Hex)		
	Device type Device or bus address	247 (default)		
	Device revision	03 (hex)		
	ITK Version	6.1.2		
	ITK Certification Driver No.	IT099000		
	Link Master capability (LAS)	Yes		
	Choice of Link Master / Basic Device	Yes; factory setting: Basic Device		
	Virtual Communication Relationship (V			
	Number of VCRs	44		
	Number of link objects in VFD	50		
	Permanent entries	44		
	Client VCRs	0		
	Server VCRs	5		
	Source VCRs	8		
	Sink VCRs	0		
	Subscriber VCRs	12		
	Publisher VCRs	19		
	Link settings			
	Slot time	4		
	Min. inter PDU delay	12		
	Max. response delay	40		
	Blocks			
	Block description	Execution time (macro-cycle ≤ 500	Block category	
	block description	ms)	Block category	
	Resource Block Transducer Block Sensor 1	Permanent Pre-instantiatied	Extended Manufacturer-specific	
	Transducer Block Sensor 2	Pre-instantiatied	Manufacturer-specific	
	Transducer Block Display Transducer Block Adv. Diag.	Pre-instantiatied Pre-instantiatied	Manufacturer-specific Manufacturer-specific	
	Function Block AI1	35 ms (pre-instantiatied)	Extended	
	Function Block AI2	35 ms (pre-instantiatied)	Extended	
	Function Block AI3 Function Block AI4	35 ms (pre-instantiatied) 35 ms (not instantiated)	Extended Extended	
	Function Block AI5	35 ms (not instantiated)	Extended	
	Function Block AI6	35 ms (not instantiated)	Extended	
	Function Block PID	30 ms	Standard	
	Function Block ISEL	30 ms	Standard	

iTEMP TMT162 Technical data

Brief block description	
Resource Block	The Resource Block contains all the data that clearly identify and characterize the device. It is an electronic version of a nameplate on the device. In addition to parameters that are needed to operate the device on the fieldbus, the Resource Block makes information such as the order code, device ID, hardware revision, software revision, device release etc. available.
Transducer Block "Sensor 1" and "Sensor 2"	The Transducer Blocks of the field transmitter contain all the measurement-specific and device-specific parameters which are relevant for the measurement of the input variables.
Display Transducer	The parameters of the "Display" Transducer Block enable the configuration of the display.
Advanced Diagnostic	All the parameters for self-monitoring and diagnostics are grouped in this Transducer Block.
Analog Input (AI)	In the AI function block, the process variables from the Transducer Blocks are prepared for the subsequent automation functions in the control system (e.g. scaling, limit value processing).
PID	This function block contains input channel processing, proportional integral-differential control (PID) and analog output channel processing. The following can be realized: Basic controls, feedforward control, cascade control and cascade control with limiting.
Input Selector (ISEL)	The Input Selector Block enables the selection of up to four inputs and generates an output based on the configured action.

Switch-on delay

8 s

13.3 Power supply

Supply voltage

 U_b = 9 to 32 V, polarity-independent (reverse polarity protection for T17 housing), maximum voltage U_b = 35 V. According to IEC 60079-27, FISCO/FNICO

Current consumption

Current consumption (device basic current)	≤ 11 mA
Switch-on current (device inrush current)	≤ 11 mA
Error current FDE (Fault Disconnection Electronic)	0 mA

Terminals

2.5 mm² (12 AWG) plus ferrule

Cable entries

Version	Туре	
ead 2x thread ½" NPT		
	2x thread M20	
	2x thread G½"	
Cable gland	2x coupling M20	

Connectors

Version	Туре
Thread and fieldbus connector	2x thread ½" NPT 1x connector 7/8" FF
	2x thread M20x1.5 1x connector 7/8" FF

Technical data iTEMP TMT162

Cable specification

→ 🖺 15

13.4 Performance characteristics

Response time

Measured value update ≤ 1 s per channel, depending on the type of sensor and connection method

Reference operating conditions

■ Calibration temperature: +25 °C±3 K (77 °F±5.4 °F)

■ Supply voltage: 24 V DC

• 4-wire circuit for resistance adjustment

Maximum measured error

The data concerning the measured error are typical values and correspond to a standard deviation of $\pm 3~\sigma$ (normal distribution), i.e. 99.8% of all the measured values achieve the given values or better values.

	Designation	Accuracy (digital)
Resistance thermometer (RTD)	Cu100, Pt100, Ni100, Ni120 Pt500 Cu50, Pt50, Pt1000, Ni1000 Cu10, Pt200	0.1 °C (0.18 °F) 0.3 °C (0.54 °F) 0.2 °C (0.36 °F) 1 °C (1.8 °F)
Thermocouples (TC)	K, J, T, E, L, U N, C, D S, B, R	typ. 0.25 °C (0.45 °F) typ. 0.5 °C (0.9 °F) typ. 1.0 °C (1.8 °F)
	Measuring range	Accuracy (digital)
Resistance transmitter (Ω)	10 to 400 Ω 10 to 2000 Ω	±0.04 Ω ±0.08 Ω
Voltage transmitter (mV)	-20 to 100 mV	±10 μV

Physical input measuring range of sensors	
10 to 400Ω	Cu10, Cu50, Cu100, polynomial RTD, Pt50, Pt100, Ni100, Ni120
10 to 2 000 Ω	Pt200, Pt500, Pt1000, Ni1000
-20 to 100 mV	Thermocouples type: C, D, E, J, K, L, N, U
-5 to 30 mV	Thermocouples type: B, R, S, T

Sensor adjustment

Sensor transmitter matching

RTD sensors are one of the most linear temperature measuring elements. Nevertheless, the output must be linearized. To significantly improve temperature measurement accuracy, the device allows the use of two methods:

iTEMP TMT162 Technical data

Customized linearization

The transmitter can be programmed with sensor-specific curve data with the PC configuration software. As soon as the sensor-specific data have been entered, the transmitter uses these to create a customized curve.

■ Callendar-Van-Dusen coefficients
The Callendar-Van-Dusen equation is described as: $R_T = R_0[1 + AT + BT^2 + C(T - 100)T^3]$

where A, B and C are constant. They are commonly referred as Callendar-Van-Dusen coefficients. The precise values of A, B and C are derived from the calibration data for the RTD and are specific for each RTD sensor. The process involves programming the transmitter with the curve data for a certain RTD instead of using a standardized curve. Sensor transmitter matching using one of the methods explained above significantly improves the temperature measurement accuracy of the entire system. This is a result of the transmitter using the sensor's actual resistance vs. temperature curve data instead of the ideal curve data.

Resolution

Resolution of A/D converter = 18 bit

Non-repeatability

According to EN 61298-2

Physical input measuring range of sensors		Non-repeatability
10 to 400Ω	Cu10, Cu50, Cu100, polynomial RTD, Pt50, Pt100, Ni100, Ni120	15 mΩ
10 to 2 000 Ω	Pt200, Pt500, Pt1000, Ni1000	100 ppm x measured value
-20 to 100 mV	Thermocouples type: C, D, E, J, K, L, N, U	4 μV
-5 to 30 mV	Thermocouples type: B, R, S, T	3 μV

Long-term drift

 ≤ 0.1 °C/year (≤ 0.18 °F/year) under reference operating conditions.

Influence of ambient temperature

Effect on the accuracy when ambient temperature changes by 1 $^{\circ}$ C (1.8 $^{\circ}$ F):		
Input 10 to 400Ω	typ. 0.001% of measured value, min. 1 m Ω	
Input 10 to 2 000 Ω	typ. 0.001% of measured value, min. 10 m Ω	
Input-20 to 100 mV	typ. 0.001% of measured value, min. 0.2 μV	
Input-5 to 30 mV	typ. 0.001% of measured value, min. 0.2 μV	

Typical sensitivities of resistance thermometers		
Pt: 0.00385 * R _{nom} /K	Cu: 0.0043 * R _{nom} /K	Ni: 0.00617 * R _{nom} /K

Example of Pt100: $0.00385 \times 100 \Omega/K = 0.385 \Omega/K$

Typical sensitivities of thermocouples					
B: 10 μV/K at 1000 °C (1832 °F)	C: 20 μV/K at 1000 °C (1832 °F)	D: 20 μV/K at 1000 °C (1832 °F)	E: 75 μV/K at 500 ℃ (932 ℉)	J: 55 μV/K at 500 ℃ (932 ℉)	K: 40 μV/K at 500 °C (932 °F)
L: 55 µV/K at 500 °C (932 °F)	N: 35 μV/K at 500 °C (932 °F)	R: 12 μV/K at 1000 °C (1832 °F)	S: 12 μV/K at 1000 °C (1832 °F)	T: 50 μV/K at 1000 °C (1832 °F)	U: 60 μV/K at 500 °C (932 °F)

Technical data iTEMP TMT162

Examples of calculating the measured error with ambient temperature drift

Example 1:

Input temperature drift $\Delta\theta$ = 10 K (18 °F), Pt100, measuring range 0 to +100 °C (+32 to +212 °F)

Maximum process temperature: 100 °C (212 °F)

Measured resistance value: 138.5 Ω (IEC 60751) at maximum process temperature

Typical temperature drift in Ω : (0.001% of 138.5 Ω) * 10 = 0.01385 Ω Conversion to Kelvin: 0.01385 Ω / 0.385 Ω /K = 0.04 K (0.054 °F)

Example 2:

Input temperature drift $\Delta\theta$ = 10 K (18 °F), thermocouple type K, measuring range 0 to +600 °C (+32 to +1112 °F)

Maximum process temperature: 600 °C (1112 °F)

Measured thermoelectric voltage: 24905 V (see IEC 60584)

Typical temperature drift in μV : (0.001% of 24095 $\mu V)$ * 10 = 2.5 μV

Conversion to Kelvin: 2.5 μ K / 40 μ V/K/K = 0.06 K (0.11 °F)

Total uncertainty of measurement of the measuring point

According to the Guide to the Expression of Uncertainty in Measurement (GUM), the uncertainty of measurement can be calculated as follows:

A0024854-FN

Example of calculating the total uncertainty of measurement of a thermometer:

Ambient temperature drift $\Delta\theta$ = 10 K (18 °F), Pt100 Class A, measuring range 0 to +100 °C (+32 to +212 °F), maximum process temperature: 100 °C (212 °F), k = 2

- Basic measured error: 0.1 K (0.18 °F)
- Measured error caused by ambient temperature drift: 0.04 K (0.072 °F)
- Measured error of the sensor: $0.15 \text{ K} (0.27 \,^{\circ}\text{F}) + 0.002 \,^{*} 100 \,^{\circ}\text{C} (212 \,^{\circ}\text{F}) = 0.35 \,^{*}\text{K} (0.63 \,^{\circ}\text{F})$

Total measurement =
$$2\sqrt{\frac{(0.1 \text{ K})^2}{3} + \frac{(0.04 \text{ K})^2}{3} + \frac{(0.35 \text{ K})^2}{3}} = 0.42 \text{ K} (0.76 \text{ °F})$$

A0024855-EN

Influence of the reference junction

Pt100 DIN IEC 60751 Cl. B (internal cold junction with thermocouples TC)

13.5 Environment

Ambient temperature range

- Without display: -40 to +85 °C (-40 to +185 °F)
- With display: -40 to +80 °C (-40 to +176 °F)

For hazardous areas see Ex documentation $\rightarrow \implies 59$

The display can react slowly at temperatures $< -20 \,^{\circ}\text{C}$ ($-4 \,^{\circ}\text{F}$). The legibility of the display cannot be guaranteed at temperatures $< -30 \,^{\circ}\text{C}$ ($-22 \,^{\circ}\text{F}$).

Storage temperature

- Without display: -50 to +100 °C (-58 to +212 °F)
- With display: $-50 \text{ to } +80 \,^{\circ}\text{C} \, (-58 \text{ to } +176 \,^{\circ}\text{F})$

Humidity

Permitted

iTEMP TMT162 Technical data

Altitude	Up to 2000 m (6560 ft) above mean sea level in accordance with IEC 61010-1, CSA 1010.1-92				
Climate class	As per IEC 60654-1, Class C				
Degree of protection	 Die-cast aluminum or stainless steel housing: IP67, NEMA 4X Stainless steel housing for hygienic applications (T17 housing): IP66 / IP68 (1.83 m H2O for 24 h), NEMA 4X, NEMA 6P 				
Shock and vibration	2 to 150 Hz at 3g as per IEC 60068-2-6				
resistance	The use of L-shaped mounting brackets can cause resonance (see wall/pipe 2" mounting bracket in the 'Accessories' section). Caution: vibrations at the transmitter may not exceed specifications.				
Electromagnetic	CE compliance				
Electromagnetic compatibility (EMC)	· 	irements specified in IEC endation is a uniform an aboratories and process (d practical way of detern control are immune to in	mining	
	CE compliance The device meets all the requ NAMUR NE21. This recomm whether the devices used in l	irements specified in IEC endation is a uniform an aboratories and process (d practical way of detern control are immune to in	mining	
3	CE compliance The device meets all the requ NAMUR NE21. This recomm whether the devices used in I with the objective of increasi	irements specified in IEC endation is a uniform an aboratories and process on g their functional safety	d practical way of determine to in the control are immune to interpret and in the control are immune to interpret are immune are immune to interpret are immune are i	mining nterferenc	
	CE compliance The device meets all the requ NAMUR NE21. This recomm whether the devices used in I with the objective of increasis	irements specified in IEC endation is a uniform an aboratories and process on g their functional safety EN/IEC 61000-4-2	d practical way of determination of determination of the control are immune to in the control are immune to interest and in the control are immune to interest are immune to interest and in the control are immune to interest are immun	mining	
	CE compliance The device meets all the requ NAMUR NE21. This recomm whether the devices used in l with the objective of increasis	irements specified in IEC endation is a uniform an aboratories and process on their functional safety EN/IEC 61000-4-2 EN/IEC 61000-4-3	d practical way of determination of the control are immune to in the control are immune to interest and immune to interest are immune	mining nterferenc	

network.

Degree of contamination


Pollution degree 2 as per IEC 61010-1.

Technical data iTEMP TMT162


13.6 Mechanical construction


Design, dimensions

Dimensions in mm (in)

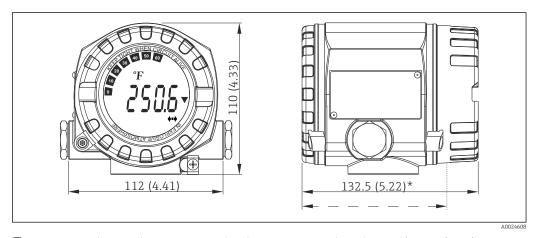

 ightharpoonup 17 Die-cast aluminum housing for general applications, or optional stainless steel housing (316L)



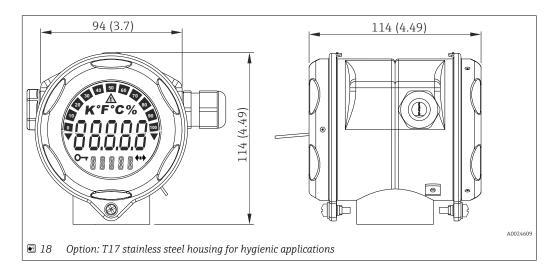

- Separate electronics module and connection compartment
- Display attachable in 90° stages

Weight

- Aluminum housing approx. 1.4 kg (3 lb), with display
- Stainless steel housing approx. 4.2 kg (9.3 lb), with display
- T17 housing approx. 1.25 kg (2.76 lb), with display

Materials

Housing	Nameplate
Die-cast aluminum housing AlSi10Mg/AlSi12 with powder coating on polyester base	Aluminum AlMgl, anodized in black
AISI 316L	1.4404 (AISI 316L)
Stainless steel 1.4435 (AISI 316L) for hygienic applications (T17 housing)	-

iTEMP TMT162 Technical data

Cable entries	Version	Туре
		2x thread ½" NPT
		2x thread M20
		2x thread G½"
	Cable gland	2x coupling M20

13.7 Certificates and approvals

CE mark	The measuring system meets the legal requirements of the EC guidelines. The manufacturer confirms that the device conforms to all relevant guidelines by affixing the CE mark.
Ex approval	Information about currently available Ex versions (ATEX, FM, CSA, etc.) can be supplied by your E+H Sales Center on request. All explosion protection data are given in separate documentation which is available upon request.
MTBF	126 a, according to Siemens Standard SN29500
CSA GP	CAN/CSA-C22.2 No. 61010-1, 2nd Edition
FOUNDATION Fieldbus	The temperature transmitter is certified and registered by the Fieldbus FOUNDATION. The

roundation Fieldbus certification

The temperature transmitter is certified and registered by the Fieldbus FOUNDATION. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus™ specification
- FOUNDATION Fieldbus™ H1
- Interoperability Test Kit (ITK), revision status 6.1.2, device certification number
 - \rightarrow $\stackrel{\triangle}{=}$ 52: The device can also be operated with certified devices of other manufacturers.
- Physical Layer Conformance Test of the Fieldbus FOUNDATION™ (FF-830 FS 1.0)

Other standards and guidelines

- **IEC 60529:** Degrees of protection provided by enclosures (IP code)
- **IEC 61010:** Safety requirements for electrical equipment for measurement, control and laboratory use.
- **IEC 61326:** Electromagnetic compatibility (EMC requirements)
- NAMUR Standardization organization for measurement and control processes in the chemical and pharmaceutical industry. (www.namur.de)
- **NEMA** Standardization organization for the electrical industry.

13.8 Documentation

- FOUNDATION Fieldbus™ Function Blocks manual (BA062S/04)
- Supplementary ATEX documentation:
 - ATEX II2G, EEx d: XA00031R/09/a3
 - ATEX II1/2D: XA00032R/09/a3
 - ATEX II1G: XA00033R/09/a3
 - ATEX EEx ia + EEx d: XA01025R/09/a3
 - ATEX II3G: XA062R/09/a3


14 Operation via FOUNDATION Fieldbus™

14.1 Block model

In the FOUNDATION Fieldbus[™] tasks all the device parameters are categorized according to their functional properties and task and are generally assigned to three different blocks. A block may be regarded as a container in which parameters and the associated functionalities are contained. A FOUNDATION Fieldbus[™] device has the following block types:

- A Resource Block (device block):
 The Resource Block contains all the device-specific features of the unit.
- One or more Transducer Blocks:
 The Transducer Blocks contain the measuring and device-specific parameters of the device.
- One or more function blocks:
 The function blocks contain the device's automation functions. We distinguish between different function blocks, e.g. Analog Input function block, Analog Output function block. Each of these function blocks is used to execute different application functions.

Depending on how the individual function blocks are arranged and connected, various automation tasks can be realized. In addition to these blocks, a field device may have other blocks, e.g. several Analog Input function blocks if more than one process variable is available from the field device.

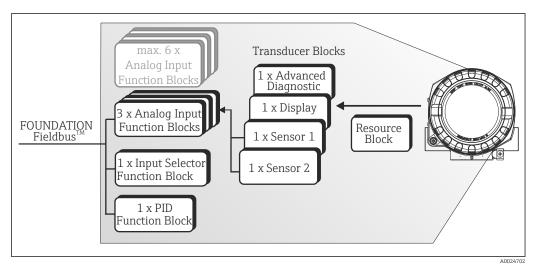

■ 19 Block model of the temperature field transmitter

14.2 Resource Block (device block)

The Resource Block contains all the data that clearly identify and characterize the field device. It is an electronic version of a nameplate on the field device. In addition to parameters that are needed to operate the device on the fieldbus, the Resource Block makes information such as the order code, device ID, hardware version, firmware version, device revision etc. available.

 
A further task of the Resource Block is the management of overall parameters and functions that have an influence on the execution of the remaining function blocks in the field device. The Resource Block is thus a central unit that also checks the device status and thereby influences or controls the operability of the other function blocks and thus also of the device. As the Resource Block does not have any block input and block output data, it cannot be linked to other blocks.

The most important functions and parameters of the Resource Block are listed below.

14.2.1 Selecting the operating mode

The operating mode is set by means of the MODE_BLK parameter group. The Resource Block supports the following operating modes:

- AUTO (automatic mode)
- OOS (out of service)
- MAN (manual mode)



14.2.2 Block status

The current operating status of the Resource Block is displayed in the RS_STATE parameter. The Resource Block can assume the following states:

- STANDBY The Resource Block is in the OOS operating mode. It is not

possible to execute the remaining function blocks.

- ONLINE LINKING The configured connections between the function blocks

have not yet been established.

- ONLINE Normal operating status, the Resource Block is in the AUTO

operating mode. The configured connections between the

function blocks have been established.

14.2.3 Write protection and simulation

DIP switches on the optional display allow device parameter write protection and simulation in the Analog Input function block to be disabled or enabled. $\rightarrow \cong 22$

The WRITE_LOCK parameter shows the status of the hardware write protection. The following statuses are possible:

- LOCKED The device data cannot be altered via the FOUNDATION

Fieldbus interface.

– NOT LOCKED The device data can be altered via the FOUNDATION

Fieldbus interface.

The BLOCK_ERR parameter indicates whether a simulation is possible in the Analog Input function block.

- Simulation Active DIP switch for simulation mode active.

14.2.4 Alarm detection and processing

Process alarms provide information on certain block states and events. The status of the process alarms is communicated to the fieldbus host system by means of the BLOCK_ALM parameter. The ACK_OPTION parameter allows you to specify whether an alarm has to be acknowledged by means of the fieldbus host system.

The following process alarms are generated by the Resource Block:

Block process alarms

The following block process alarms of the Resource Block are displayed by means of the BLOCK_ALM parameter:

- OUT OF SERVICE
- SIMULATE ACTIVE
- Write protection process alarm

If the write protection is disabled, the alarm priority specified in the WRITE_PRI parameter is checked before the status change is relayed to the fieldbus host system. The alarm priority specifies the behavior in the event of an active write protection alarm WRITE ALM.

If the option of a process alarm was not activated in the ACK_OPTION parameter, this process alarm must only be acknowledged in the BLOCK_ALM parameter.

14.2.5 Resource Block FF parameters

The following table shows all the specified FOUNDATION™ Fieldbus parameters of the Resource Block.

Parameter	Write access with operating mode (MODE_BLK)	Description
Acknowledge Option (ACK_OPTION)	AUTO - OOS	This parameter is used to specify whether a process alarm must be acknowledged at the time of alarm recognition by the fieldbus host system. If this option is enabled, the process alarm is acknowledged automatically. Factory default: The option is not enabled for any alarm, the alarms must be acknowledged.
Alarm Summary (ALARM_SUM)	AUTO - OOS	Displays the current status of the process alarms in the Resource Block. In addition the process alarms can also be disabled in this parameter group.
Alert Key (ALERT_KEY)	AUTO - OOS	Use this function to enter the identification number of the plant unit. This information can be used by the fieldbus host system for sorting alarms and events. User input: 1 to 255 Factory default: 0
Block Alarm (BLOCK_ALM)	AUTO - OOS	The current block status appears on the display with information on pending configuration, hardware or system errors, including information on the alarm period (date, time) when the error occurred.
		The block alarm is triggered in the event of the following block errors: SIMULATE ACTIVE OUT OF SERVICE
		If the option of the alarm has not been enabled in the ACK_OPTION parameter, the alarm can only be acknowledged via this parameter.
Block Error (BLOCK_ERR)	Read only	The active block errors appear on the display.
		 SIMULATE ACTIVE: Simulation is possible in the Analog Input function block via the SIMULATE parameter. Refer also to hardware write protection configuration. →
Block Error Description 1 (BLOCK_ERR_DESC_1)	Read only	Displays further information for solving block errors. Simulation permitted: Simulation is allowed due to activated hardware simulation switch. Failsafe active: Failsafe mechanism in an AI block is active.
Capability Level (CAPABILITY_LEVEL)	Read only	Indicates the capability level that the device supports.
Clear Fault State (CLR_FSTATE)	AUTO - OOS	This parameter can be used to manually disable the security behavior of the analog output and discrete output function blocks.
Compatibility Revision (COMPATIBILITY_REV)	Read only	This parameter indicates until which previous device revision the device is compatible.

Parameter	Write access with operating mode (MODE_BLK)	Description
Confirm Time (CONFIRM_TIME)	AUTO - OOS	Specifies the confirmation time for the event report. If the device does not receive confirmation within this time then the event report is sent to the fieldbus host system again. Factory default: 640000^{1}_{32} ms
Cycle Selection (CYCLE_SEL)	AUTO - OOS	Displays the block execution method used by the fieldbus host system. The block execution method is selected by the fieldbus host system.
Cycle Type (CYCLE_TYPE)	Read only	Displays the block execution method supported by the device. SCHEDULED: Timed block execution method. BLOCK EXECUTION: Sequential block execution method. MANUF SPECIFIC: Manufacturer specified.
DD Resource (DD_RESOURCE)	Read only	Displays the reference source for the device description in the device.
DD Revision (DD_REV)	Read only	Displays the revision number of the ITK-tested device description.
Device Revision (DEV_REV)	Read only	Displays the revision number of the device.
Device Tag (ENP_DEVICE_TAG)	Read only	Tag name/device TAG.
Device type (DEV_TYPE)	Read only	Displays the device identification number in hexadecimal numerical format. Display: 0x10CC (hex) for TMT162 FF
Electronic Name Plate Version (ENP_VERSION)	Read only	Version of the ENP (electronic name plate).
Fault State (FAULT_STATE)	Read only	Current status display of the security behavior of the analog output and discrete output function blocks.
Check Active (FD_CHECK_ACTIVE)	Read only	Reflects the error conditions that are being detected as active as selected for this category.
Check Alarm (FD_CHECK_ALM)	AUTO - OOS	Are used primarily to broadcast a change in the associated active conditions.
Check Map (FD_CHECK_MAP)	AUTO - OOS	Enable or disable conditions to be detected as active for this alarm category.
Check Mask (FD_CHECK_MASK)	AUTO - OOS	Allow to suppress any single or multiple conditions.
Check Priority (FD_CHECK_PRI)	AUTO - OOS	Allow to specify the priority of this alarm category.
Fail Active (FD_FAIL_ACTIVE)	Read only	Reflect the error conditions that are being detected as active as selected for this category.
Fail Diagnostic Alarm (FD_FAIL_ALM)	AUTO - OOS	Are used primarily to broadcast a change in the associated active conditions.
Fail Map (FD_FAIL_MAP)	AUTO - OOS	Enable or disable conditions to be detected as active for this alarm category
Fail Mask (FD_FAIL_MASK)	AUTO - OOS	Allow to suppress any single or multiple conditions.
Fail Priority (FD_FAIL_PRI)	AUTO - OOS	Allow to specify the priority of this alarm category.
Maintenance Active (FD_MAINT_ACTIVE)	Read only	Reflect the error conditions that are being detected as active as selected for this category.
Maintenance Alarm (FD_MAINT_ALM)	AUTO - OOS	Are used primarily to broadcast a change in the associated active conditions.
Maintenance Map (FD_MAINT_MAP)	AUTO - OOS	Enable or disable conditions to be detected as active for this alarm category.
Maintenance Mask (FD_MAINT_MASK)	AUTO - OOS	Allow to suppress any single or multiple conditions.
Maintenance Priority (FD_MAINT_PRI)	AUTO - OOS	Allow to specify the priority of this alarm category.
Offspec Active (FD_OFFSPEC_ACTIVE)	Read only	Reflect the error conditions that are being detected as active as selected for this category.
Offspec Alarm (FD_OFFSPEC_ALM)	AUTO - OOS	Are used primarily to broadcast a change in the associated active conditions.

Parameter	Write access with operating mode (MODE_BLK)	Description
Offspec Map (FD_OFFSPEC_MAP)	AUTO - 00S	Enable or disable conditions to be detected as active for this alarm category.
Offspec Mask (FD_OFFSPEC_MASK)	AUTO - 00S	Allow to suppress any single or multiple conditions.
Offspec Priority (FD_OFFSPEC_PRI)	AUTO - OOS	Allow to specify the priority of this alarm category.
Recommended Action (FD_RECOMMEN_ACT)	Read only	A device enumerated summarization of the most severe condition or conditions detected.
Field Diagnostic Simulate (FD_SIMULATE)	AUTO - OOS	Used as the field diagnostic condition when the simulation is enabled.
Field device diagnostic version (FD_VER)	Read only	The major version of the field diagnostics specification used for the development of this device.
Features (FEATURES)	Read only	Displays the additional options supported by the device. Display: Reports Faultstate Hard W Lock Change Bypass in Auto MVC Report Distribution supported Multi-bit Alarm (Bit-Alarm) Support
Feature Selection (FEATURES_SEL)	AUTO - OOS	For selecting the additional functions supported by the device.
FF communication software version (FF_COMM_VERSION)	Read only	This parameter includes the version information of the communication stack software used in the device.
Firmware Version (FIRMWARE_ VERSION)	Read only	Displays the version of the device software.
Free Time (FREE_TIME)	Read only	Displays the free system time (in percent) available for execution of further function blocks. Since the function blocks of the device are preconfigured, this parameter always displays the value 0.
Free Space (FREE_SPACE)	Read only	Displays the free system memory (in percent) available for execution of further function blocks. Since the function blocks of the device are preconfigured, this parameter always displays the value 0.
Grant Deny (GRANT_DENY)	AUTO - OOS	Enables or restricts the access authorization of a fieldbus host system to the field device.
Hard Types (HARD_TYPES)	Read only	Displays the input signal type for the Analog Input function block.
Hardware Version (HARDWARE_ VERSION)	Read only	Displays the version of the device hardware.
ITK Version (ITK_VER)	Read only	Displays the version number of the supported ITK test.
Limit Notify (LIM_NOTIFY)	AUTO - OOS	This parameter is used to specify the number of event reports that can exist unconfirmed at the same time. Options: 0 to 3 Factory default: 0
Manufacturer ID (MANUFAC_ID)	Read only	Displays the manufacturer's ID number. Display: 0x452B48 (hex) = Endress+Hauser
Max Notify (MAX_NOTIFY)	Read only	Displays the maximum number of event reports supported by the device that can exist unconfirmed at the same time. Display: 3
Memory Size (MEMORY_SIZE)	Read only	Displays the available configuration memory in kilobytes. This parameter is not supported.
Minimum Cycle Time (MIN_CYCLE_T)	Read only	Displays the minimum execution time.

Parameter	Write access with operating mode (MODE_BLK)	Description
Block Mode (MODE_BLK)	AUTO - OOS	Displays the current (Actual) and desired (Target) operating mode of the Resource Block, the permitted modes (Permitted) supported by the Resource Block and the normal operating mode (Normal). Display: AUTO - OOS
		 The Resource Block supports the following operating modes: AUTO (automatic operation) In this mode the execution of the remaining blocks (ISEL, AI and PID function block) is permitted. OOS (out of service) The block is in the "Out of Service" mode. In this mode execution of the remaining blocks (ISEL, AI and PID function block) is blocked. These blocks cannot be set to AUTO mode. The current operating status of the Resource Block is also shown via the RS_STATE parameter.
Resource Directory (RES_DIRECTORY)	Read only	Displays the resource directory for the electronic name plate (ENP).
Nonvolatile Cycle Time (NV_CYCLE_T)	Read only	Displays the time interval for which the dynamic device parameters are stored in the nonvolatile memory. The time interval displayed relates to storage of the following dynamic device parameters: OUT PV FIELD_VAL SP These values are stored in the nonvolatile memory every 11 minutes. Display: 21120000 (1/32 ms).
Order Code / Identification (ORDER_CODE)	Read only	Displays the order code for the device.
Extended order code (ORDER_CODE_EXT)	Read only	Displays the extended order code of the device.
Extended order code part2 (ORDER_CODE_EXT_PAR T2)	Read only	Displays the second part of the extended order code, always empty in this device (therefore sometimes not displayed in host systems.
Restart (RESTART)	AUTO - OOS	This parameter is used to reset the device in various ways.
Access code (RS_ACCESS_CODE)	AUTO - OOS	Enter access code. Use this function to enable the service parameters via the operating tool. This function allows service technicians to change ENP parameters (serial number, device tag, order code and extended order code). The access code is write only. Reading this parameter always returns to 0 . The service parameters should only be
Access level (RS_ACCESS_LEVEL)	Read only	modified by the service organization. Use this function to show access authorization to the parameters. Options Operator Service Factory default: Operator
Resource State (RS_STATE)	Read only	 Displays the current operating status of the Resource Block. STANDBY: The Resource Block is in the OOS operating mode. It is not possible to execute the remaining blocks. ONLINE LINKING: The configured connections between the function blocks have not yet been made. ONLINE: Normal operating status, the Resource Block is in the AUTO operating mode. The configured connections between the function blocks are established.
Serial Number (SERIAL_NUMBER)	Read only	Displays the device serial number.
Set Fault State (SET_FSTATE)	AUTO - OOS	This parameter can be used to manually enable the security behavior of the device.
Shed Remote Cascade (SHED_RCAS)	AUTO - OOS	Specifies the monitoring time for checking the connection between the fieldbus host system and a function block in the RCAS operating mode. When the monitoring time elapses, the function block changes from the RCAS operating mode to the operating mode selected in the SHED_OPT parameter. Factory default: 640000^{1} ₃₂ ms

Write access with operating mode (MODE_BLK)	Description
AUTO - OOS	Specifies the monitoring time for checking the connection between the fieldbus host system and the PID function block in the ROUT operating mode. When the monitoring time elapses, the PID function block changes from the ROUT operating mode to the operating mode selected in the SHED_OPT parameter.
	A detailed description of the PID function blocks can be found in the FOUNDATION Fieldbus™ Function Blocks manual (BA00062S/04).
	Factory default: 640 000 ¹ / ₃₂ ms
AUTO - OOS	Parameter for grouping and thus faster evaluation of blocks. Grouping is carried out by entering the same numerical value in the STRATEGY parameter of each individual block. Factory default: 0
	This data is neither checked nor processed by the Resource Block.
Read only	The revision status of the static data appears on the display.
	The revision status is incremented on each modification of static data.
AUTO - OOS	Entry of a user-specific text for unique identification and assignment of the block.
AUTO - OOS	This parameter is required only for interoperability tests and has no meaning in normal operation.
Read only	Indicates whether static block data have been altered, including date and time.
AUTO - OOS	Displays the status of the write protected alarm.
	The alarm is triggered if the write protection is disabled.
Read only	Display of the current write protection (setting only via DIP switch on the display).
	Display: • LOCKED: Device data cannot be modified
	■ NOT LOCKED: Device data can be modified ■ UNINITIALIZED
AUTO - OOS	Specifies the behavior of a write protected alarm ("WRITE_ALM" parameter).
	 User input: 0 = The write protection alarm is not evaluated. 1 = No report to the fieldbus host system in the event of a write protection alarm. Device data can be modified. 2 = Reserved for block alarms. 3-7 = The write protection alarm is output with the appropriate priority (3 = low priority, 7 = high priority) to the fieldbus host system as a user notice. 8-15 = The write protection alarm is output with the appropriate priority (8 = low priority, 15 = high priority) to the fieldbus host system as a critical alarm. Factory default: 0
	AUTO - OOS Read only AUTO - OOS Read only AUTO - OOS

14.3 Transducer Blocks

The Transducer Blocks of the field transmitter contain all the measuring and device-specific parameters. All the settings directly connected with the application (temperature measurement) are made here. They form the interface between sensor-specific measured value processing and the Analog Input function blocks required for automation.

→ ■ 19, ■ 60

A Transducer Block allows you to influence the input and output variables of a function block. The parameters of a Transducer Block include information on the sensor configuration, physical units, calibration, damping, error messages, etc. as well as the device-specific parameters.

The device-specific parameters and functions of the field transmitter are split into several Transducer Blocks, each covering different task areas.

- Transducer Block "Sensor 1" / base index 500 or Transducer Block "Sensor 2" / base index 600: This block contains all the parameters and functions that have to do with measuring the input variables (e.g. temperature).
- Transducer Block "Display" / base index 700: The parameters of this block allow the configuration of the display.
- **Transducer Block "Advanced Diagnostic" / base index 800:** This block comprises the parameters for automatic monitoring and diagnosis.

14.3.1 Block output variables

The following table shows which output variables (process variables) the Transducer Blocks make available. Transducer Blocks "Display" and "Advanced Diagnostic" do not have any output variables. The CHANNEL parameter in the Analog Input function block is used to assign which process variable is read in and processed in the downstream Analog Input function block.

Block	Process variable	Channel parameter (AI Block)	Channel
Transducer Block "Sensor 1"	Primary Value	Primary Value 1	1
	Sensor Value	Sensor Value 1	3
	Device temperature value	Device temperature	5
Transducer Block "Sensor 2"	Primary Value	Primary Value 2	2
	Sensor Value	Sensor Value 2	4
	Device temperature value	Device temperature	6

14.3.2 Selecting the operating mode

The operating mode is set by means of the MODE_BLK parameter group. The Transducer Block supports the following operating modes:

- AUTO (automatic mode)
- OOS (out of service)
- MAN (manual mode)

14.3.3 Alarm detection and processing

The Transducer Block does not generate any process alarms. The status of the process variables is evaluated in the downstream Analog Input function blocks. If the Analog Input function block receives no input value that can be evaluated from the Transducer Block then a process alarm is generated. This process alarm is displayed in the BLOCK_ERR parameter of the Analog Input function block (BLOCK_ERR = Input Failure).

14.3.4 Accessing the manufacturer-specific parameters

14.3.5 Selecting the units

The system units selected in the Transducer Blocks do not have any effect on the desired units which should be transmitted by means of the FOUNDATION Fieldbus interface. This setting is made separately via the corresponding AI Block in the XD_SCALE parameter group. The unit selected in the Transducer Blocks is only used for the onsite display and for displaying the measured values within the Transducer Block in the configuration program in question.

A detailed description of the Analog Input (AI) function block can be found in the FOUNDATION Fieldbus™ Function Blocks manual (BA00062S/ 04).

14.3.6 Transducer Block FF parameters

The following table lists all the specified FOUNDATION Fieldbus parameters of the Transducer Blocks. The device-specific parameters are described as of table 'Transducer Block 'Sensor 1 and 2"

Parameter	Write access with operating mode (MODE_BLK)	Description
Static revision (STAT_REV)	AUTO - OOS	The revision status of the static data appears on the display.
		The revision status parameter is incremented on each modification of static data. This parameter is reset to 0 in all blocks in the event of a factory reset.
Tag description (TAG_DESC)	AUTO - OOS	Use this function to enter a user-specific text of max. 32 characters for unique identification and assignment of the block. Factory setting: (no text)
Strategy (STRATEGY)	Read only	Parameter for grouping and thus faster evaluation of blocks. Grouping is carried out by entering the same numerical value in the STRATEGY parameter of each individual block. Factory setting: 0
		These data are neither checked nor processed by the Transducer Blocks.
Alert key (ALERT_KEY)	AUTO - OOS	Use this function to enter the identification number of the plant unit. This information can be used by the fieldbus host system for sorting alarms and events. User input: 1 to 255 Factory setting: 0
Block Mode (MODE_BLK)	AUTO - OOS	Displays the current (Actual) and desired (Target) operating mode of the corresponding Transducer Block, the permitted modes (Permitted) supported by the Resource Block and the normal operating mode (Normal). Display: AUTO; OOS; MAN
		 The Transducer Block supports the following operating modes: AUTO (automatic mode): The block is executed. OOS (out of service): The block is in the "Out of Service" mode. The process variable is updated, but the status of the process variable changes to BAD. MAN (manual mode):
		The block is in the "manual mode". The process variable is updated. This status shows that the resource block is "Out of Service".
Block Error (BLOCK_ERR)	Read only	The active block errors appear on the display. Display: OUT OF SERVICE - The block is in the "out of service" operating mode.
		The following block errors are only shown in the Sensor Transducer Blocks: OTHER Further information is availabe in the Advanced Diagnostic Transducer BLOCK CONFIGURATION ERROR The block has been configured incorrectly. In the parameter BLOCK_ERR_DESC1 the cause of the configuration error is displayed SENSOR FAILURE Error at one or both sensor inputs
Update Event (UPDATE_EVT)	AUTO - OOS	Indicates whether static block data have been altered, including date and time.

Parameter	Write access with operating mode (MODE_BLK)	Description
Block Alarm (BLOCK_ALM)	AUTO - OOS	The current block status appears on the display with information on pending configuration, hardware or system errors, including information on the alarm period (date, time) when the error occurred.
		 In addition, the active block alarm can be acknowledged in this parameter group. The device does not use this parameter to display a process alarm since this is generated in the BLOCK_ALM parameter of the Analog Input function block.
Transducer Type (TRANSDUCER_ TYPE)	Read only	The Transducer Block type appears on the display. Display: Sensor Transducer Blocks: Custom Sensor Transducer Display Transducer Block: Custom Display Transducer Advanced Diagnostic Block: Custom Adv. Diag. Transducer
Transducer Type Version (TRANSDUCER_ TYPE_VER)	Read only	Display of the transducer block type version.
Collection Directory (COLLECTION_ DIR)	Read only	Display of the Collection Directory, always 0.
Transducer Error (XD_ERROR)	Read only	The active device error appears on the display. Exact error description as well as information on rectifying faults see section 'Diagnostics and troubleshooting'. → 🗎 37
		Possible display: No error (normal status) Electronics failure Data integrity error Mechanical failure Configuration error Calibration error General error
		Summarized device status/condition, more precise information on the pending error(s) is available by means of the manufacturer-specific error display. This can be read via the Transducer Block "Advanced Diagnostic" in the "ACTUAL_STATUS_CATEGORY" and "ACTUAL_STATUS_NUMBER" parameters.

14.3.7 Transducer Blocks 'Sensor 1 and 2'

The 'Sensor 1 and 2' Transducer Blocks analyze the signals of both sensors by way of technical measurement techniques and display them as a physical variable (value, measured value status and unit). Two physical measured values and an additional primary value which is mathematically calculated from the sensor values (the PRIMARY_VALUE) are available in each Sensor Transducer Block:

- The sensor value (SENSOR VALUE) and its unit (SENSOR RANGE -> UNITS INDEX)
- The value of the internal temperature measurement of the device (DEVTEMP_VALUE) and its unit (RJ_VALUE_UNIT)
- The primary value (PRIMARY_VALUE -> VALUE) and its unit (PRIMARY_VALUE_UNIT)

The internal temperature measurement of the reference junction is analyzed in both Transducer Blocks but both values are identical. A third value in the block, the PRIMARY_VALUE, is formed from the sensor values.

The rule for forming the PRIMARY_VALUE can be selected in the PRIMARY_VALUE_TYPE parameter. The sensor value can be mapped unchanged in PRIMARY_VALUE but there is also the option of forming the differential value or mean value for both sensor values. In addition, various additional functions for connecting the two sensors are also available. These can help increase process safety, like the backup function or sensor drift detection.

■ Backup function:

If a sensor fails, the system automatically switches to the remaining sensor and a diagnostic message is generated in the device. The backup function ensures that the process is not interrupted by the failure of an individual sensor and that an extremely high degree of safety and availability is achieved.

Sensor drift detection:

If 2 sensors are connected and the measured values differ by a specified value, the device generates a diagnostic message. The drift detection function can be used to verify the correctness of the measured values and for mutual monitoring of the connected sensors. Sensor drift detection is configured in the Transducer Block 'Advanced Diagnostic'. $\rightarrow \blacksquare 76$

The electronics can be configured for various sensors and measured variables by means of the SENSOR_TYPE parameter.

If resistance thermometers or resistance transmitters are connected, the type of connection can be selected by means of the SENSOR_CONNECTION parameter. If the "two-wire" type of connection is used, the TWO_WIRE_COMPENSATION parameter is available. This parameter is used to store the resistance value of the sensor connection cables.

The resistance value can be calculated as follows:

- Total cable:100 m
- Conductor cross-section: 0.5 mm²
- Conductor material: copper
- Resistivity of Cu: $0.0178 \Omega * mm^2/m$

R = 0.0178 Ω * mm²/m * (2 * 100 m)/0.5 mm² = 7.12 $\Omega.$ Resulting measured error = 7.12 Ω / 0.385 Ω/K = 18.5 K


The Transducer Blocks for sensor 1 and 2 have a wizard (configuration assistant) for calculating the resistance of sensor cables with different material properties, cross-sections and lengths.

When measuring temperature with thermocouples, the type of reference junction compensation is specified in the RJ_TYPE parameter. For the compensation, the internal terminal temperature measurement of the device (INTERNAL) can be used or a fixed value can be specified (EXTERNAL). This value has to be entered in the RJ_EXTERNAL_VALUE parameter.

The units displayed are selected with the PRIMARY_VALUE_UNIT and SENSOR_RANGE \rightarrow UNITS_INDEX parameters. It must be ensured that the units selected physically suit the measured variables.

The Sensor 1 and 2 Transducer Blocks each make the "Quick Setup" wizard available to configure the measuring settings quickly and safely.

Sensor error adjustment can be performed with the sensor offset. Here, the difference between the reference temperature (target value) and the measured temperature (actual value) is determined and entered in the SENSOR_OFFSET parameter. This offsets the standard sensor characteristic in parallel and an adjustment between the target value and actual value is performed.

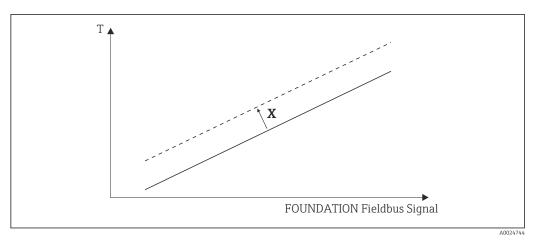

■ 20 Sensor offset

X Offset

Standard sensor characteristic

--- Sensor characteristic with offset setting


Linearization

The Sensor 1 and 2 Transducer Blocks also give users the option of linearizing any sensor type by entering polynom coefficients. The design provides for three types. Each of the values can be passed onto an AI function block or shown on the display. The AI and the Display Block make further options available for displaying and scaling measured values.

Linear scaling of temperature-linear curve

With the aid of linear scaling (offset and slope), the complete measuring point (measuring device + sensor) can be adapted to the desired process. Users must run through the following procedure for this purpose.

- 1. Switch the setting for the SENSOR_CAL_METHOD parameter to "user trim standard calibration". Then apply the lowest process value to be expected (e.g. -10 °C) to the sensor of the device. This value is then entered in the CAL_POINT_LO parameter. Make sure that the status for SENSOR_VALUE is "Good".
- 2. Now expose the sensor to the highest process value to be expected (e.g. +120 °C), again ensure the status is "Good" and enter the value in the CAL_POINT_HI parameter. The device now precisely shows the specified process value at the two calibrated points. The curve follows a straight line between the points.
- 3. The SENSOR_CAL_LOC, SENSOR_CAL_DATE and SENSOR_CAL_WHO parameters are available to track sensor calibration. The place, date and time of calibration can be entered here as well as the name of the person responsible for the calibration.
- 4. To undo sensor input calibration, the SENSOR_CAL_METHOD parameter is set to "Factory Trim Standard Calibration".
- Menu guidance via the "User Sensor Trim" wizard is available for linear scaling. The "Factory Trim Settings" wizard can be used to reset the scaling.

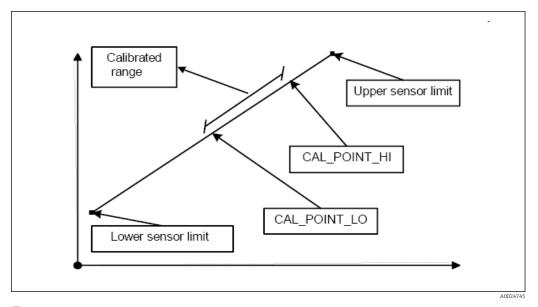

■ 21 Linear scaling of temperature-linear curve

Linearization of platinum resistance thermometers with the aid of Callendar-Van Dusen coefficients:

The coefficients RO, A, B, C can be specified in the CVD_COEFF_RO, CVD_COEFF_A, CVD_COEFF_B, CVD_COEFF_C parameters. To activate this linearization, select the "RTD Callendar Van Dusen" setting in the SENSOR_TYPE parameter. In addition, the upper and lower calculation limits have to be entered in the CVD_COEFF_MIN and CVD_COEFF_MAX parameters.

The Callendar-Van Dusen coefficients can also be entered by means of the "Callendar Van Dusen" wizard.

Linearization of copper/nickel resistance thermometers (RTD)

The coefficients RO, A, B, C can be specified in the POLY_COEFF_RO, POLY_COEFF_A, POLY_COEFF_B, POLY_COEFF_C parameters. To activate this linearization, select the "RTD Polynom Nickel" or "RTD Polynom Copper" setting in the SENSOR_TYPE parameter. In addition, the upper and lower calculation limits have to be entered in the POLY_COEFF_MIN and POLY_COEFF_MAX parameters.

The coefficients for nickel and copper polynoms can be entered with the aid of a wizard in the Transducer Blocks Sensor 1 and 2'.

Block configuration error

Due to an incorrect setting the device might display the event **437-configuration**. This means that the current transmitter configuration is not valid. The parameter BLOCK_ERR_DESC1 in the transducer blocks shows the cause of this configuration error.

Display	Description
Sensor 1 is 4-wire RTD and sensor 2 is RTD	If sensor 1 is configured as a 4-wire RTD, no RTD can be selected at sensor 2.
Sensor type 1 and sensor unit 1 do not match	The sensor type at channel 1 and the selected sensor unit do not match.
Sensor type 2 and sensor unit 2 do not match	The sensor type at channel 2 and the selected sensor unit do not match.
PV type calculation mode and "No Sensor" chosen	The PV is an interconnection of the two sensor inputs, however "No Sensor" is selected as sensor type.

Display	Description
PV type calculation mode, sensor 1 unit Ω and sensor 2 unit not Ω	The PV is an interconnection of the two sensor inputs, the sensor unit 1 is Ω , however sensor unit 2 is not.
PV type calculation mode, sensor 2 unit Ω and sensor 1 unit not Ω	The PV is an interconnection of the two sensor inputs, the sensor unit 2 is Ω , however sensor unit 1 is not.
PV type calculation mode, sensor 1 unit mV and sensor 2 unit not mV	The PV is an interconnection of the two sensor inputs, the sensor unit 1 is mV , however the sensor unit 2 is not.
PV type calculation mode, sensor 2 unit mV and sensor 1 unit not mV	The PV is an interconnection of the two sensor inputs, the sensor unit 2 is mV, however the sensor unit 1 is not.
Sensor 1 unit and PV unit do not match	The sensor unit 1 and the PV unit are not compatible.
Sensor 2 unit and PV unit do not match	The sensor unit 2 and the PV unit are not compatible.
Drift and "No Sensor" chosen	The sensor drift function has been activated however "No Sensor" was selected as sensor type.
Drift chosen and units do not match	The sensor drift function has been activated however the units of the two sensors are not compatible.

Device-specific parameters

 $The following \ table \ shows \ all \ the \ Endress+Hauser-device-specific \ parameters \ of \ the \ sensor \ Transducer \ Blocks \ Sensor \ 1 \ and \ 2'.$

Parameter	Write access with operating mode (MODE_BLK)	Description			
Primary value (PRIMARY_VALUE)	Dynamic / read only	Result of link PRIMARY_VALUE_TYPE: VALUE STATUS The PRIMARY_VALUE can be made available to the AI Block for further processing. The assigned unit is the PRIMARY VALUE UNIT.			
Primary value unit (PRIMARY_VALUE_UNIT)	OOS	Configuring the unit of the PRIMARY_VALUE. The measurement range and engineering units are configured with an existing link in the relevant Analog Input function block using the XD_SCALE parameter group. A detailed description of the Analog Input (AI) function block can be found in the FOUNDATION Fieldbus™ Function Blocks manual (BA00062S/04).			
Primary value type (PRIMARY_VALUE_TYPE)	OOS	The calculation process for the PRIMARY_VALUE appears on the display. Sensor Transducer 1: PV = SV_1: Sensor Value 1 PV = SV_1-SV_2: Difference PV = 0.5 x (SV_1+SV_2): Average PV = 0.5 x (SV_1+SV_2) redundancy: Average or Sensor Value 1 or Sensor Value 2 in the event of a sensor error in the other sensor. PV = SV_1 (OR SV_2): Backup function: If sensor 1 fails, the value of sensor 2 automatically becomes the Primary Value. PV = SV_1 (OR SV_2 if SV_1>T): PV changes from SV_1 to SV_2 if SV_1 > value T (THRESHOLD_VALUE parameter) Sensor Transducer 2: PV = SV_2: Sensor Value 2 PV = SV_2: Sensor Value 2 PV = O.5 x (SV_2+SV_1): Average PV = 0.5 x (SV_2+SV_1): redundancy: Average or Sensor Value 1 or Sensor Value 2 in the event of a sensor error in the other sensor. PV = SV_2 (OR SV_1): Backup function: If sensor 2 fails, the value of sensor 1 automatically becomes the Primary Value. PV = SV_2 (OR SV_1 if SV_2>T): PV changes from SV_2 to SV_1 if SV_2 > value T (THRESHOLD_VALUE parameter)			
Threshold value (THRESHOLD_VALUE)	oos	Value for switching in the threshold PV mode. Entry in the range from -270 to $+2450^{\circ}\text{C}$ (-454 to $+4442^{\circ}\text{F})$			

Parameter	Write access with operating mode (MODE_BLK)	Description		
Primary value max. indicator (PV_MAX_INDICATOR)	AUTO - OOS	Max. indicator for PV is stored in the nonvolatile memory in intervals of 10 minutes Can be reset.		
Primary value min. indicator (PV_MIN_INDICATOR)	AUTO - OOS	Min. indicator for PV is stored in the nonvolatile memory in intervals of 10 minutes. Can be reset.		
Sensor value (SENSOR_VALUE)	Dynamic / read only	Sensor Transducer 1: VALUE = Value of the sensor connected to the S1 terminal group STATUS = Status of this value		
		Sensor Transducer 2: VALUE = Value of the sensor connected to the S2 terminal group STATUS = Status of this value		
Sensor type (SENSOR_TYPE)	OOS	Configuration of the sensor type: Sensor Transducer 1: Settings for sensor input 1 Sensor Transducer 2: Settings for sensor input 2		
		Please observe the wiring diagram when connecting the individual sensors. In the case of 2-channel operation, the possible connection options also have to be observed. → 🖺 17		
Sensor connection	OOS	Sensor connection mode.		
(SENSOR_CONNECTION)		Sensor Transducer 1: 2-wire		
		2-wife3-wire4-wire		
		Sensor Transducer 2:		
		2-wire3-wire		
Sensor range (SENSOR_RANGE)	Read only (EU_100, EU_0) OOS (UNITS_INDEX, DECIMAL)	Physical measuring range of the sensor: EU_100 (upper sensor range limit) EU_0 (lower sensor range limit) UNITS_INDEX (unit of the SENSOR_VALUE) DECIMAL (places after the decimal point for the SENSOR_VALUE. This does not affect the measured value display.)		
Sensor offset (SENSOR_OFFSET)	OOS	Offset of the SENSOR_VALUE.		
, - ,		The following values are permitted: -10 to +10 for Celsius, Kelvin, mV and Ohm -18 to +18 for Fahrenheit, Rankine		
2-wire compensation (TWO_WIRE_COMPENSATION)	OOS	Two-wire compensation with the following permitted values: 0 to 30 Ω		
Sensor serial number (SENSOR_SN)	AUTO - OOS	Serial number of the sensor.		
Sensor max. indicator (SENSOR_MAX_INDICATOR)	AUTO - OOS	Max. indicator of the SENSOR_VALUE - Is stored in the nonvolatile memory in intervals of 10 minutes. Can be reset.		
Sensor min. indicator SENSOR_MIN_ INDICATOR	AUTO - OOS	Min. indicator of the SENSOR_VALUE - Is stored in the nonvolatile memory in intervals of 10 minutes. Can be reset.		
Mains filter (MAINS_FILTER)	OOS	Mains filter for the A/D converter.		
Calibration highest point	OOS	Upper point for linear characteristic calibration (this affects offset and slope).		
(CAL_POINT_HI)		To write to this parameter, SENSOR_CAL_METHOD must be set to 'User Trim Standard Calibration'.		
Calibration lowest point (CAL_POINT_LO)	OOS	Lower point for linear characteristic calibration (this affects offset and slope). To write to this parameter, SENSOR_CAL_METHOD must be set to 'User Trim Standard Calibration'.		
Calibration minimum span (CAL_MIN_SPAN)	OOS	Span of the measuring range, depending on the sensor type set.		
Calibration unit (CAL_UNIT)	Read only	Unit for sensor calibration.		

74

Parameter	Write access with operating mode (MODE_BLK)	Description			
Sensor calibration method (SENSOR_CAL_ METHOD)	oos	 Factory trim standard calibration: Sensor linearization with the factory calibration values User trim standard calibration: Sensor linearization with the values CAL_POINT_HI and CAL_POINT_LO 			
		The original linearization can be established by resetting this parameter to 'Factory Trim Standard Calibration'. For linear characteristic calibration, the Transducer Block makes a wizard available (User Sensor Trim).			
Sensor calibration location	OOS	Name of the location where the sensor calibration was carried out.			
(SENSOR_CAL_ LOC)		To write to this parameter, SENSOR_CAL_METHOD must be set to 'User Trim Standard Calibration'.			
Sensor calibration date (SENSOR_CAL_	OOS	Date and time of the calibration.			
DATE)		To write to this parameter, SENSOR_CAL_METHOD must be set to 'User Trim Standard Calibration'.			
Sensor calibration who (SENSOR_CAL_	OOS	Name of the person responsible for the calibration.			
WHO)		To write to this parameter, SENSOR_CAL_METHOD must be set to 'User Trim Standard Calibration'.			
Callendar Van Dusen A (CVD_COEFF_A)	OOS	Sensor linearization based on the Callendar Van Dusen method.			
Callendar Van Dusen B (CVD_COEFF_B)	OOS	The CVD_COEFF_XX parameters are used for calculating the response curve if 'RTD Callendar Van Dusen' is set in the SENSOR TYPE parameter. Both			
Callendar Van Dusen C (CVD_COEFF_C)	OOS	Transducer Blocks make a wizard available for configuring the parameters			
Callendar Van Dusen R0 (CVD_COEFF_R0)	OOS	based on the 'Callendar Van Dusen method'.			
Callendar Van Dusen Measuring Range Maximum (CVD_COEFF_MAX)	OOS	Upper calculation limit for Callendar Van Dusen linearization.			
Callendar Van Dusen Measuring Range Minimum (CVD_COEFF_MIN)	OOS	Lower calculation limit for Callendar Van Dusen linearization.			
Polynom Coeff. A (POLY_COEFF_A)	OOS	Sensor linearization of copper/nickel resistance thermometers (RTD).			
Polynom Coeff. B (POLY_COEFF_B)	OOS	The POLY_COEFF_XX parameters are used for calculating the response curve if 'RTD Polynom Nickel or RTD Polynom Copper' is set in the SENSOR_TYPE			
Polynom Coeff. C (POLY_COEFF_C)	OOS	parameter. Both Transducer Blocks make a wizard (sensor polynom) available			
Polynom Coeff. R0 (POLY_COEFF_R0)	OOS	for configuring the parameters based on the 'Polynom method'.			
Polynom (Nickel/ Copper) Measuring Range Maximum (POLY_COEFF_MAX)	OOS	Upper calculation limit for the RTD polynom (nickel/copper) linearization.			
Polynom (Nickel/ Copper) Measuring Range Minimum (POLY_COEFF_MIN)	OOS	Lower calculation limit for the RTD polynom (nickel/copper) linearization.			
Device temperature (DEVTEMP_VALUE)	Dynamic / read only	Internal device temperature measurement: VALUE STATUS			
Reference junction type (RJ_TYPE)	008	Configuration of reference junction measurement for temperature compensation: NO_REFERENCE: No temperature compensation is used. INTERNAL: Internal reference junction temperature is used for the temperature compensation. EXTERNAL: RJ_EXTERNAL_VALUE is used for the temperature compensation.			
Device temperature value unit (RJ_VALUE_UNIT)	Read only	Unit of the internal device temperature. This always corresponds to the unit set in SENSOR_RANGE \rightarrow UNITS_INDEX.			
Reference junction external value (RJ_EXTERNAL_VALUE)	OOS	Value for temperature compensation (see RJ_TYPE parameter).			
Device temperature max. indicator (DEVTEMP_MAX_INDICA TOR)	AUTO - OOS	Max. indicator of the internal device temperature is stored in the nonvolatile memory in intervals of 10 minutes.			
Device temperature min. indicator (DEVTEMP_MIN_INDICA TOR)	AUTO - OOS	Min. indicator of the internal device temperature is stored in the nonvolatile memory in intervals of 10 minutes.			

14.3.8 Transducer Block 'Advanced Diagnostic'


The Transducer Block "Advanced Diagnostic" is used to configure and display all the diagnostic functions of the transmitter. Functions such as: corrosion detection, drift detection, ambient temperature monitoring are displayed here.

Corrosion detection

Drift detection

Drift detection can be configured with the SENSOR_DRIFT_MONITORING parameter. Drift detection can be enabled or disabled.

If drift detection is enabled and a drift occurs, an error or maintenance prompt is output. A distinction is made between 2 different modes (SENSOR_DRIFT_MODE). In the 'Overshooting' mode, a status message is output if the limit value (SENSOR_DRIFT_ALERT_VALUE) for the drift is overshot, or, as the case may be, if the limit value is undershot in the 'Undershooting' mode.

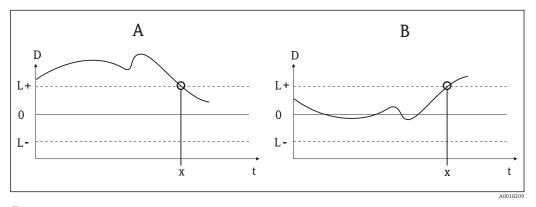

■ 22 Drift detection

A 'Undershooting' mode

B 'Overshooting' mode

D Drift

L+, Upper (+) or lower (-) limit value

L-

t Time

x Error or prompt for maintenance, depending on the configuration

In addition, the entire status information of the device and the maximum indicators of the two sensor values and the internal temperature are available.

The following table shows all the Endress+Hauser parameters of the sensor Transducer Block 'Advanced Diagnostic'.

Parameter	Write access with operating mode (MODE_BLK)	Description
Corrosion detection (CORROSION_ DETECTION)	00S	 OFF: Corrosion detection off ON: Corrosion detection on Only possible for RTD 4-wire connection and thermocouples (TC).
Sensor Drift monitoring (SENSOR_DRIFT_ MONITORING)	008	Deviation between SV1 and SV2 will be displayed according to the Field Diagnostic configuration of the diagnostic event "103-Drift": OFF: Sensor deviation monitoring off (diagnostic event 103 has been deactivated) ON: Sensor deviation monitoring on (when occurring the diagnostic event 103 with the respectively configurated category is displayed)

76

Parameter	Write access with operating mode (MODE_BLK)	Description		
Sensor Drift mode (SENSOR_DRIFT_ MODE)	oos	Select whether a status is generated if the value set in the SENSOR_DRIFT_LIMIT parameter is undershot (Undershooting) or overshot (Overshooting).		
		If "Overshooting" is selected, the corresponding diagnostic event is generated if the limit value is overshot (SENSOR_DRIFT_LIMIT). In the case of "Undershooting", the diagnostic event is output if the limit value is undershot.		
Sensor Drift alert value (SENSOR_DRIFT_ ALERT_VALUE)	oos	Limit value of the permitted deviation from 1 to 999.99.		
System Alarm delay (SYSTEM_ALARM_DELAY)	oos	Alarm hysteresis: Value as to the time a device status (Failure or Maintenance) and measured value status (Bad or Uncertain) is delayed until the status is output. Can be configured between 0 and 10 seconds.		
		This setting does not affect the display.		
Actual Status Category / Previous Status Category (ACTUAL_STATUS_CATE GORY / PREVIOUS_STATUS_ CATEGORY)	Read only / AUTO - OOS	Current/last status category Good: No errors detected F: Failure: Error detected C: Function check: Device is in the service mode S: Out of Spec.: Device is being operated outside the specifications M: Maintenance required: Maintenance necessary Not categorized: No NAMUR category has been selected for the current diagnostic event		
Actual Status Number / Previous Status Number (ACTUAL_ STATUS_ NUMBER / PREVIOUS_ STATUS_ NUMBER)	Read only / AUTO - OOS	Current/last status number O00 NO_ERROR: No error is present O41 SENSOR_BREAK: Sensor rupture O43 SENSOR_SHORTCUT: Sensor short circuit O42 SENSOR_CORROSION: Corrosion of connections or sensor cables 101 SENSOR_UNDERUSAGE: Measured value of the sensor is below the linearization range 102 SENSOR_OVERUSAGE: Measured value of the sensor is above the linearization range 104 BACKUP_ACTIVATED: Backup function activated due to sensor failure 103 DEVIATION: Sensor drift detected 501 DEVICE_PRESET: Reset routine in progress 482 SIMULATION: Device is in the simulation mode 402 STARTUP: Device is in the startup/initialization phase 502 LINEARIZATION: Linearization incorrectly selected or configured 901 AMBIENT_TEMPERATURE_LOW: Ambient temperature too low; DEVTEMP_VALUE < -40 °C (-40 °F) 902 AMBIENT_TEMPERATURE_HIGH: Ambient temperature too high; DEVTEMP_VALUE > +85 °C (+185 °F) 261 ELECTRONICBOARD: Electronics module/hardware faulty 431 NO_CALIBRATION: Calibration values lost/modified 283 MEMORY_ERROR: Contents of memory inconsisten 221 RJ_ERROR: Error in reference junction measurement/internal temperature measurement		
Actual Status Channel/ Previous Status Channel (PREVIOUS/ ACTUAL_ STATUS_ CHANNEL)	Read only / AUTO - OOS	 ACTUAL_STATUS_CHANNEL displays the channel that currently has the error with the highest value. PREVIOUS_STATUS_CHANNEL indicates the channel where an error last occurred. 		
Actual Status Description / Previous Status Description (PREVIOUS/ ACTUAL_ STATUS_DESC)	Read only / AUTO - OOS	Displays the descriptions of the current and previous error status. The descriptions can be taken from the description for the Actual Status Number/ Previous Status Number parameter.		
Actual Status Count (ACTUAL_STATUS_COUNT)	Read only	The number of status messages currently pending in the device.		
Primary Value 1 Max. Indicator (PV1_MAX_ INDICATOR)	AUTO - OOS	Indicator for the maximum value to occur for PV1, can be reset by writing an arbitrary value in this parameter		
Primary Value 1 Min. Indicator (PV1_MIN_ INDICATOR)	AUTO - OOS	Indicator for the minimum value to occur for PV1, can be reset by writing an arbitrary value in this parameter.		
Primary Value 2 Max. Indicator (PV2_MAX_ INDICATOR)	AUTO - OOS	Indicator for the maximum value to occur for PV2, can be reset by writing an arbitrary value in this parameter.		

Parameter	Write access with operating mode (MODE_BLK)	Description	
Primary Value 2 Min. Indicator (PV2_MIN_ INDICATOR)	AUTO - 00S	Indicator for the minimum value to occur for PV2, can be reset by writing an arbitrary value in this parameter.	
Sensor 1 Max. Indicator (SV1_MAX_ INDICATOR)	AUTO - 00S	Indicator for the maximum value to occur at sensor 1, can be reset by writing an arbitrary value in this parameter.	
Sensor 1 Min. Indicator (SV1_MIN_ INDICATOR)	AUTO - 00S	Indicator for the minimum value to occur at sensor 1, can be reset by writing an arbitrary value in this parameter.	
Sensor 2 Max. Indicator (SV2_MAX_ INDICATOR)	AUTO - 00S	Indicator for the maximum value to occur at sensor 2, can be reset by writing an arbitrary value in this parameter.	
Sensor 2 Min. Indicator (SV2_MIN_ INDICATOR)	AUTO - OOS	Indicator for the minimum value to occur at sensor 2, can be reset by writing an arbitrary value in this parameter.	
Device temperature max. Indicator (DEVTEMP_MAX_ INDICATOR)	AUTO - 00S	Indicator for the maximum value to occur at the internal reference temperature measuring point, can be reset by writing an arbitrary value in this parameter.	
Device temperature min. Indicator (DEVTEMP_MIN_ INDICATOR)	AUTO - 00S	Indicator for the minimum value to occur at the internal reference temperature measuring point, can be reset by writing an arbitrary value in this parameter.	
CONFIG_AREA_1CONFIG_AR EA _15	oos	The configurable area of the FOUNDATION Fieldbus Field Diagnostics. One of the four diagnostic events: 42 - Corrosion 103 - Drift 901 - Ambient temperature too low 902 - Ambient temperature too high can be separated from the factory configured diagnostic group and can be categorized	
		individually. By setting to one of the Field Diagnostic Bits 1-15 the category for this Bit can be configured to the categories F, C, S, M in the Resource Block. → 🖺 84	
STATUS_SELECT _42	OOS		
STATUS_SELECT _103	OOS	The value status (BAD, UNCERTAIN, GOOD) for the respective diagnostic event can be	
STATUS_SELECT _901	OOS	configured.	
STATUS_SELECT _902	OOS		
DIAGNOSIS_SIMULATION_ ENABLE	OOS	Activating or deactivating of the simulation of an diagnostic event.	
DIAGNOSIS_ SIMULATION_ NUMBER	AUTO - OOS	Selection of the diagnostic event to be simulated.	

14.3.9 Transducer Block 'Display'

The settings in the 'Display' Transducer Block make it possible to display measured values from the two Transducer Blocks 'Sensor 1 and 2' on the display which can be purchased as an option. The selection is made by means of the DISPLAY_SOURCE_X1 parameter. The number of decimal places displayed can be configured independently for every channel using the DISP_VALUE_X_FORMAT parameter. Symbols are available for the units °C, K, F, %, mV, R and Ω . These units are displayed automatically when the measured value is selected. Further units will be attached automatically to the additional text of the measured value.

This additional text is entered in the DISP_VALUE_X_TEXT parameter and has a maximum length of 16 characters. In addition, the display allows the user to display a scalable bar graph. The minimum and maximum values of the bar graph are specified by means of the DISP_VALUE_X_BGMIN and DISP_VALUE_X_BGMAX parameters. The "Display" Transducer Block can show up to 6 values alternately on the display, including the related text and bar graph. The system automatically switches between the values after a configurable time interval (between 2 and 20 seconds) which can be set in the ALTERNATING TIME parameter.

The measured values of external devices are read into the device with the "Input Selector (ISEL)" or "PID" function block provided these values are available on the bus. Four values are available in the display from the Input Selector Block (ISEL) and one from the PID. The unit of the measured value is not displayed automatically for values from the Input Selector (ISEL) and PID Blocks. It is recommended to enter the unit as additional text here (DISP_VALUE_X_TEXT). The value displayed and its status are shown in the "DISPLAY_VALUE_X" parameter for every channel of the display.

The following table shows all the Endress+Hauser parameters of the sensor Transducer Block 'Display'.

Parameter	Write access with operating mode (MODE_BLK)	Description
Alternating time ALTERNATING_ TIME	AUTO - OOS	Entry (in s) as to how long a value should be shown on the display. Setting from 2 to 20 s.
Display value x DISP_VALUE_X 1)	Read only	Selected measured value: Status Value
Display source x DISP_SOURCE_X	AUTO - OOS	For selecting the value to be displayed. Possible settings: Off Primary Value 1 Sensor Value 1 Primary Value 2 Sensor Value 2 If all 6 display channels are switched off ('Off option), the display will show "".
Display value description x DISP_VALUE_X_ DESC	AUTO - OOS	Description of the display value displayed. Maximum 12 letters. The value is not shown on the display.
Decimal places x DISP_VALUE_ X_FORMAT	AUTO - OOS	For selecting the number of places displayed after the decimal point. Configuration option from 0 to 4. The option 4 means 'AUTO'. The maximum number of decimal places possible always appears on the display. Possible settings: Auto xxxxx xxxxx xxxxxx xxxxxxx

1) X = number of the display channel in question (1 to 3)

Configuration example. The following measured values should be shown on the display:

		-
Val	1110	- 1

Measured value to be displayed

Text to be displayed

TEMP PIPE 11

Decimal places

Maximum temperature

Z50 °C

Minimum temperature

Value 2

Measured value to be displayed RJ value of sensor transducer 2

Text to be displayed INTERN TEMP

 $\begin{array}{ll} \mbox{Decimal places} & 1 \\ \mbox{Maximum temperature} & 0 \ \mbox{°C} \\ \mbox{Minimum temperature} & 40 \ \mbox{°C} \\ \end{array}$

Value 3

Measured value to be displayed Measured value of an external device read in

by the bus with Input Selector (ISEL) channel

2

Text to be displayed VALVE 3 POS

 $\begin{array}{lll} \mbox{Decimal places} & 3 \\ \mbox{Maximum temperature} & 0 \mbox{ }^{\circ}\mbox{C} \\ \mbox{Minimum temperature} & 100 \mbox{ }^{\circ}\mbox{C} \end{array}$

Every measured value should be visible on the display for 12 seconds.

For this purpose, the following settings should be made in the 'Display' Transducer Block:

Parameter	Value
DISP_SOURCE_1	'Primary Value 1'
DISP_VALUE_1_TEXT	TEMP PIPE 11
DISPLAY_VALUE_1_FORMAT	'xxx.xx'
DISP_VALUE_1_BGMAX	250
DISP_VALUE_1_BGMIN	50
DISP_SOURCE_2	'RJ VALUE 2'
DISP_VALUE_2_TEXT	INTERN TEMP
DISPLAY_VALUE_2_FORMAT	'xxxx.x'
DISP_VALUE_2_BGMAX	40
DISP_VALUE_2_BGMIN	0
DISP_SOURCE_3	'ISEL IN 2'
DISP_VALUE_3_TEXT	VALVE 3 POS
DISPLAY_VALUE_3_FORMAT	'xx.xxx'
DISP_VALUE_3_BGMAX	100
DISP_VALUE_3_BGMIN	0
ALTERNATING_TIME	12

14.4 Analog Input function block

In the Analog Input (AI) function block, the process variables of the Transducer Blocks are prepared for subsequent automation functions (e.g. linearization, scaling and limit value processing). The automation function is defined by connecting up the outputs.

A detailed description of the Analog Input (AI) function block can be found in the FOUNDATION Fieldbus™ Function Blocks manual (BA00062S/ 04).

14.5 PID function block (PID controller)

A PID function block contains the input channel processing, the proportional integral differential control (PID) and the analog output channel processing. The configuration of the PID function block depends on the automation task. The following can be realized: Basic controls, feedforward control, cascade control, cascade control with limiting.

A detailed description of the PID function block can be found in the FOUNDATION FieldbusTM Function Blocks manual (BA00062S/04).

14.6 Input Selector function block

The signal selector block (Input Selector block = ISEL) provides selection of up to four inputs and generates an output based on the configured action.

A detailed description of the Input Selector function block can be found in the FOUNDATION FieldbusTM Function Blocks manual (BA00062S/04).

14.7 Configuration of event behaviour according to FOUNDATION Fieldbus™ field diagnostics

The device supports the FOUNDATION Fieldbus Field Diagnostics configuration. Among other things this means:

- The diagnostic category according to NAMUR recommendation NE107 is transferred via the fieldbus in a manufacturer-independent form:
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- The diagnostic category of the predefined event groups can be adapted by the user according to the requirements of the respective application.
- Certain events can be separated from their group and can be treated separately:
 - 042: Sensor corrosion
 - 103: Drift
 - 901: Ambient temperature too low
 - 902: Ambient temperature too high
- Additional information and troubleshooting measures will be transferred with the event message via the fieldbus.
- It has to be ensured that the option Multi-bit Alarm Support is activated in the parameter FEATURE_SEL from the Resource Block.

14.7.1 Event groups

The diagnostic events are divided into 16 default groups according to the source and the importance of the event. A default event category is assigned to each group ex works. One bit of the assignment parameters belongs to each event group. The following table defines default assignments of event messages to the respective group.

Event weighting	Default event category	Event source	Bit	Events of this group
Highest weighting	Failure (F)	Sensor	31	F041: Sensor line breakF043: Sensor short circuit
		Electronics	30	 F221: Reference measurement F261: Device electronics F283: Memory error
		Configuration	29	■ F431: Reference values ■ F437: Configuration error
		Process	28	Not used with this device

Event weighting	Default event category	Event source	Bit	Events of this group
High weighting	Function check (C)	Sensor	27	Not used with this device
		Electronics	26	Not used with this device

Event weighting	Default event category	Event source	Bit	Events of this group
		Configuration	25	C402: Device initializationC482: Simulation activeC501: Device reset
		Process	24	Not used with this device

Event weighting	Default event category	Event source	Bit	Events of this group
Low weighting	Out of specification (S)	Sensor	23	Not used with this device
		Electronics	22	Not used with this device
		Configuration	21	S502: Special linearization
		Process	20	 S901: Ambient temperature too low ¹⁾ C902: Ambient temperature too high ¹⁾

1) This event can be removed from this group and treated separately; see section 'Configurable area'.

Event weighting	Default event category	Event source	Bit	Events of this group
Least weighting	Maintencance required (M)	Sensor	19	 M042: Ambient temperature too low M101: Ambient temperature too high M102: Sensor limit exceeded M103: Sensor drift/difference M104: Backup active
		Electronics	18	Not used with this device
		Configuration	17	Not used with this device
		Process	16	Not used with this device

14.7.2 Assignment parameters

The assignment of event categories to event groups is done via four assignment parameters. These are found in the block RESOURCE (RB2):

- FD FAIL MAP: for event category Failure (F)
- FD_CHECK_MAP: for event category Function check (C)
- FD_OFFSPEC_MAP: for event category Out of specification (S)
- FD_MAINT_MAP: for event category Maintenance required (M)

Each of these parameters consists of 32 bits with the following meaning:

- Bit 0: reserved by the Fieldbus Foundation ("check bit")
- Bits 1...15: Configurable area; certain diagnostic events can be assigned indepently from the event group they belong to. In this case they are removed from the event group and their behaviour can be configured individually. The following parameters can be assigned to the configurable area of this device:
 - 42: Sensor corrosion
 - 103: Drift
 - 901: Ambient temperature too low
 - 902: Ambient temperature too high
- Bits 16...31: Standard area; these bits are firmly assigned to event groups. If the bit is set to 1 this event group is assigned to the respective event category.

The following table indicates the default setting of the assignment parameters. The default setting has a clear assignment between the event weighting and the event category (i.e. the assignment parameter).

Default setting of assignment parameters


	Defa	ult raı	nge														Configurable area
Event weighting	Highest weighting			High	weigl	hting		Low weighting			Least weighting						
Event source 1)	S	Е	С	P	S	Е	С	P	S	Е	С	P	S	Е	С	P	
	•					•											
Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15 to 1
FD_FAIL_MAP	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0
FD_CHECK_MAP	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0	0	0
FD_OFFSPEC_MAP	0	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0
FD_MAINT_MAP	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	0

1) S: Sensor; E: Electronics; C: Configuration; P: Process

In order to change the diagnostic behaviour of an event group, proceed as follows:


- 1. Open assignment parameter to which the group is currently assigned to.
- 2. Change the bit of the event group from 1 to 0. In configuration systems this is done by deactivating the respective check box.
- 3. Open assignment parameter to which the group shall be assigned.
- 4. Change the bit of the event group from 0 to 1. In configuration systems this is done by activating the respective check box.

Example: The group 'Highest weighting/Configuration error' contains the events 431: 'Reference values' and 437: 'Configuration error'. These are to be categorized as Function check (C) and no longer as Failure (F).

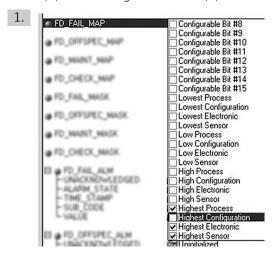

A0019661

Search for the group "Highest Configuration" in the Resource Block in the parameter FD_FAIL_MAP and deactivate the corresponding check box.

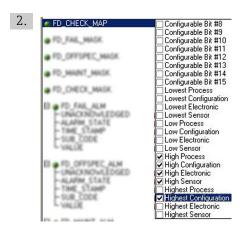

A0019663

Then search for the group "Highest Configuration" in the parameter FD_CHECK_MAP and activate the corresponding check box.

Care has to be taken that the corresponding bit is set in at least one of the assignment parameters for each event group. Otherwise no category will be transmitted with the event via the bus. Thus the control system will normally ignore the presence of the event

The detection of diagnostic events is parameterized with the MAP parameters (F, C, S, M); however not the transfer of messages to the bus. The latter is done with the MASK parameters. The Resource Block has to be set in the Auto mode so that the status information is transmitted to the bus.

14.7.3 Configurable area


The event category can be individually defined for the following events - indepent of the event group they are assigned to in the default setting:

- 042: Sensor corrosion
- 103: Drift
- 901: Ambient temperature too low
- 902: Ambient temperature too high

First, in order to change the event category, the event has to be assigned to the bits 1 to 15. The parameters 'ConfigArea_1' to 'ConfigArea_15' in the block ADVANCED DIAGNOSTIC (ADVDIAG) are used for this. Then the corresponding bit can be set from 0 to 1 in the desired assignment parameter.

Example: The diagnostic event 103 'Drift' shall no longer be categorized as Mainenance required (M) but as Out of specification (S). Furthermore the status of the measurement value shall display BAD.


1. Navigate to the Advanced Diagnostic Transducer Block and the parameter CONFIGURABLE_AREA. In the default setting all bits have the value not assigned in the column Configurable Area Bits.

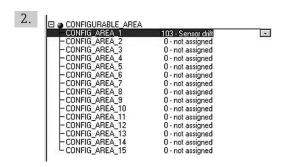

A0019664

Select one of these bits (here for example: Configurable Area Bit 1) and select the option 'Drift' from the corresponding selection list.

3. Confirm the selection with the button 'Enter'.

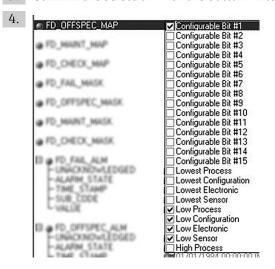

A001966

Move to the Resource Block and activate the concerning bit (here: Configurable Area Bit 1) in the parameter FD_OFFSPEC_MAP.

Now the measurement value can be additionally set for this event. With the parameter STATUS_SELECT_103 the measurement value BAD can be selected via the selection menu.

14.7.4 Cause and remedy of a diagnostic event

In the parameter FD_RECOMMEN_ACT in the Resource Block a description is displayed for the currently active diagnostic event with the highest priority.

This description has the following setup:

Diagnostic number: Diagnostic text with channel (ch x): troubleshooting recommendations separated with hyphens

Example for the diagnostic event sensor break:

41:Sensor break ch01:Check electrical connection - Replace sensor - Check configuration of the connection type

The value transmitted via the bus has the following setup: XXYYY

XX = channel number YYY = diagnostic number

The value for the above mentioned example sensor break is 01041.

14.8 Transmission of event messages to the bus

The transmission of event messages must be supported by the respective control system used.

14.8.1 Event priority

Event messages are only transmitted to the bus if they have the priority 2 to 15. Events with priority 1 will be displayed but not transmitted to the bus. Events with priority 0 are ignored. In the factory setting the priority of all events is 0. The priority can be individually adapted for the four assignment parameters. Four PRI parameters (F, C, S, M) from the Resource Block are used for this.

14.8.2 Suppression of certain events

The transmission of certain events to the bus may be suppressed via a mask. In this case these events are displayed but not transmitted to the bus. This mask can be found in the MASK parameters (F, C, S, M). The mask serves as a negative mask, that means: if a field is marked the related events are not transmitted to the bus.

iTEMP TMT162 Index

Index

Communication-specific	A	Device ID, addressing 29
Device specific 47	Accessories	
Device specific	Communication-specific 48	
B B System components 49 System architecture 2.77 H1 bus system 2.88 High Speed Ethermet (HSE) 2.89 High Speed Ithermet (HSE) 2.99 Hi	<u> </u>	
Block status Resource block RS_STATE parameter. CC CE mark. CC CE mark. Commissioning Block structure. Block structure. 33 Calibration wizards. 32 Configuration wizards. 33 Configuration wizards. 34 Connecting the sensor Possible connection combinations. 18 Terminal assignment. 17 Declaration of Conformity Beginned use. 70 Device certification FOUNDATION Fieldbus. 10 Diagnostic information Overview. 41 Consignation from the device. 23 Diagnostic information Overview. 41 Status signals. 41 Diagnostic behavior. 41 Configuration programs. 22 Document Function. 42 Document function. 44 Document function. 45 EE Endress+Hauser services Maintenance. 44 Product safety. 60 Rescalibration. 45 Repair. 77 Conversions to the device. 77 Recalibration. 78 Recalibration. 79 Recalibration. 70 Recalibration. 70 Recalibration. 70 Recalibration. 71 Resum. 74 Transducer Block 'Advanced Diagnostic' Conversion scope. 75 Configuration programs and services with recall of the device. 76 Recalibration. 77 Recalibration. 76 Recalibration. 76 Recalibration. 76 Recalibration. 77 Recalibration. 78 Recalibration. 79 Recalibration. 79 Recalibration. 70 Recalibration. 70 Recalibration. 70 Recalibration. 70 Recalibration. 71 Recalibration. 71 Recalibration. 72 Rec		
Use as display unit. 29 Resource block RS_STATE parameter 61 CC CE mark 8 Commissioning Block structure 33 Calibration wizards 32 Configuration wizards 32 Connecting the sensor Possible connection combinations 18 Terminal assignment 17 Declaration of Conformity 8 Designated use 7 Device certification FOUNDATION Fieldbus 10 Diagnostic information 0 verview 0 Diagnostic information 0 verview 12 Diagnostic sevents Diagnostic behavior 41 Status signals 41 Display elements 22 Document 4 Display elements 22 Document 4 Endress+Hauser services Maintenance 44 Function scope 25 Fieldbus cable specifications 17 Cable type 15 Maximum overall cable length 16 Number of field devices 16 Number of FieldCare Function scope 24 Use interface 25 Transducer Block Typely 79 Troubleshooting 40 Application errors with RTD sensor connection 40 Application errors with RTD sensor connec	_	
Resource block RS_STATE parameter 61 CC CE mark 88 Commissioning 81 Block structure 33 Calibration wizards 32 Connecting the sensor 9cossible connection combinations 18 Terminal assignment 17 Declaration of Conformity 88 Designated use 9crification FOUNDATION Fieldbus 100 Diagnostic information 0verview 41 Diagnostic sevents 12 Diagnostic sevents 2 Diagnostic sevents 41 Display elements 22 Document 7 Function 44 Document 10 EE Endress+Hauser services Maintenance 44 Function scope 15 Bus termination 17 Cable type 17 Current/last status category 17 Current/last st	В	
C	Block status	
CE mark		
CE mark . 8 Commissioning Block structure . 33 Linearization . Linearization . Linearization of copper/nickel resistance thermometers (RTD) . 72 Connecting the sensor . 32 Configuration wizards . 32 Configuration of platinum resistance thermometers (RTD) . 72 Linearization of copper/nickel resistance thermometers (RTD) . 72 Connection combinations . 18 Terminal assignment . 17 Dusen coefficients	RS_STATE parameter 61	
CE mark		Version data for the device 26
Commissioning Block structure Calibration wizards Calibration wizards Connecting the sensor Possible connection combinations Possible connection combinations Possible connection formation Possible connection Possible connection formation Possible connection formation Possible connection Possible		T
Block structure		
Calibration vizards 32 Configuration vizards 32 Configuration vizards 32 Connecting the sensor		
Configuration wizards 32		
Connecting the sensor Possible connection combinations 18 Terminal assignment 17 Declaration of Conformity 8 Designated use 7 Device certification FOUNDATION Fieldbus 10 Diagnostic information Overview 41 Diagnostics events 5 Diagnostic behavior 41 Status signals 41 Status signals 41 Display elements 22 Document Function 4 Document function 4 Document function 4 Declaration of Conformity 8 Bus termination 7 Field Xpert Function scope 5 Field Maximum overall cable length 16 Minemator 17 Supply line/T-box shielding 19 Technical data 20 FieldCare Function scope 24 User interface 25 FOUNDATION Fieldbus technology Linearization of platinum resistance thermometers with the aid of Callendar-Van Dusen coefficients 72 Local operation 2 N Nameplate 10 Decration options Configuration programs 22 Local operation 2 Configuration programs 22 Local operation 2 Operation options Configuration programs 22 Local operation 2 Configuration programs 22 Local operation 2 Poperation options Configuration programs 22 Local operation 2 Operation options Configuration programs 22 Local operation 2 Operation 2 Operation 2 Operation 2 Configuration programs 22 Local operation 2 Configuration programs 2 C		
Possible connection combinations		
Declaration of Conformity	5	
Docal caration of Conformity		
Declaration of Conformity 8 Declaration of Conformity 8 Declaration of Conformity 8 Declaration of Conformity 7 Nameplate 10 10 10 10 10 10 10 1	Terminal assignment	
Decidration of Conformity 8 Designated use 7 7 7 7 7 7 7 7 7	ח	Local operation
Designated use		N
Device certification FOUNDATION Fieldbus 10 Diagnostic information Overview		
Diagnostic information		Nameplate
Operation options Operation options		0
Diagnostics events Diagnostic behavior Diagnostic behavior Display elements Display element		•
Diagnostic behavior 41 Local operation 22 Status signals 41 Overview 22 Display elements 22 System files 24 Document Operational safety Conversions to the device 7 Function 4 Electromagnetic compatibility 8 E Repair 7 Endress+Hauser services Amaintenance 44 Product safety 8 Field Spert Regair 7 8 Field Spert Recalibration 44 44 Field Spert Resource block WRITE_LOCK 61 Bus termination 17 Resource block 61 Cable type 15 Return 47 Maximum overall cable length 16 Return 47 Maximum spur length 16 Transducer Block 'Advanced Diagnostic' Shielding and grounding 16 Corrosion detection 76 Supply line/T-box shielding 19 Current/last status category 77 <td< td=""><td></td><td></td></td<>		
Status signals 41 Overview 22 Display elements 22 System files 24 Document Function 4 Conversions to the device 7 Electromagnetic compatibility 8 Hazardous area 8 Repair 7 Field Xpert Prunction 44 Function scope 25 Field Sus termination 17 Cable type 15 Maximum overall cable length 16 Number of field devices 16 Shielding and grounding 16 Number of field devices 16 Shielding and grounding 16 Tansducer Block 'Advanced Diagnostic' Corrosion detection 76 Current/last status category 77 Current/last status number 77 Drift detection 76 Current/last status number 77 Drift detection 76 Configuration example 79 Troubleshooting 4pplication errors with RTD sensor connection 40 Application errors with RTD sensor connection 40 Application errors with RTD sensor connection 40 Toutleshooting 4pplication errors with RTD sensor connection 40 Application errors with RTD sensor connection 40 Toutleshooting 4pplication errors with RTD sensor connection 40 Application errors with RTD sensor connection 40 Toutleshooting 4pplication errors with RTD sensor connection 40 Application errors with RTD sensor connection 40 Application errors with RTD sensor connection 40 Application errors with RTD sensor connection 40	5	
Display elements 22 Document Function 4 Function 4 Document function 5		•
Document Function 4 Document function 5 Document function 4 Document function 6 Document function 7 Docume		
Function		
E E Repair		
E Hazardous area 8 Repair 7 Endress+Hauser services Maintenance 44 Field Xpert Function scope 25 Fieldbus cable specifications Bus termination 17 Cable type 15 Maximum overall cable length 16 Maximum spur length 16 Number of field devices 16 Shielding and grounding 16 Fieldbus connector Supply line/T-box shielding 19 Technical data 20 FieldCare Function scope 24 User interface 25 FOUNDATION Fieldbus technology Hazardous area 8 Repair 7 R Repair 7 R Recalibration 44 WRITE_LOCK 61 Return 47 Transducer Block 'Advanced Diagnostic' Corrosion detection 76 Current/last status category 77 Current/last status category 77 Transducer Block 'Display' Configuration example 79 Troubleshooting Application errors with RTD sensor connection 40		
E Repair	Document function	
Endress+Hauser services Maintenance	C	
Maintenance 44 P Product safety 8 Field Xpert Function scope 25 Recalibration 44 Fieldbus cable specifications Bus termination 17 Cable type 15 Maximum overall cable length 16 Maximum spur length 16 Number of field devices 16 Shielding and grounding 16 Fieldbus connector Supply line/T-box shielding 19 Technical data 20 FieldCare Function scope 24 User interface 5 FOUNDATION Fieldbus technology		Repail
Field Xpert Finction scope Fieldbus cable specifications Bus termination Cable type Maximum overall cable length Number of field devices Shielding and grounding Fieldbus connector Supply line/T-box shielding FieldCare Function scope Function scope User interface FOUNDATION Fieldbus technology Product safety R Product safety Product safety R R Recalibration WRITE_LOCK 61 Resource block WRITE_LOCK 61 Tansducer Block 'Advanced Diagnostic' Corrosion detection 6 Current/last status category 77 Current/last status category 77 Transducer Block 'Display' Configuration example 79 Troubleshooting Application errors with RTD sensor connection 40		Р
Field Xpert Function scope	Maintenance	-
Field Xpert Function scope	F	1 10 audet burety + + + + + + + + + + + + + + + + + + +
Function scope		R
Fieldbus cable specifications Bus termination	-	Recalibration
Bus termination		Resource block
Cable type		WRITE LOCK
Maximum overall cable length 16 Maximum spur length 16 Number of field devices 16 Shielding and grounding 16 Fieldbus connector Supply line/T-box shielding 19 Technical data 20 FieldCare Function scope 24 User interface 25 FOUNDATION Fieldbus technology Taxansducer Block 'Advanced Diagnostic' Corrosion detection 76 Current/last status category 77 Current/last status number 77 Drift detection 76 Transducer Block 'Display' Configuration example 79 Troubleshooting Application errors with RTD sensor connection 40		
Maximum spur length16Number of field devices16Shielding and grounding16Fieldbus connectorCorrosion detection76Supply line/T-box shielding19Technical data20FieldCareTransducer Block 'Advanced Diagnostic'Supply line/T-box shielding19Technical data20FieldCareTransducer Block 'Display'Function scope24User interface25FOUNDATION Fieldbus technologyApplication errors with RTD sensor connection40		
Number of field devices16Transducer Block 'Advanced Diagnostic'Shielding and grounding16Corrosion detection76Fieldbus connectorCurrent/last status category77Supply line/T-box shielding19Current/last status number77Technical data20Drift detection76FieldCareTransducer Block 'Display'Configuration example79User interface24Configuration example79FOUNDATION Fieldbus technologyApplication errors with RTD sensor connection40		T
Shielding and grounding		Transducer Block 'Advanced Diagnostic'
Fieldbus connector Supply line/T-box shielding 19 Technical data 20 FieldCare Function scope 24 User interface 25 FOUNDATION Fieldbus technology Current/last status category 77 Current/last status number 77 Drift detection 76 Transducer Block 'Display' Configuration example 79 Troubleshooting Application errors with RTD sensor connection 40		Corrosion detection
Supply line/T-box shielding 19 Technical data 20 FieldCare Function scope 24 User interface 25 FOUNDATION Fieldbus technology Current/last status number 77 Drift detection 76 Transducer Block 'Display' Configuration example 79 Troubleshooting Application errors with RTD sensor connection 40		Current/last status category
Technical data		
FieldCare Function scope		Drift detection
Function scope		
User interface		
FOUNDATION Fieldbus technology Application errors with RTD sensor connection 40		
A 1: 1: TC		5
שמום נומווסופו		
	שמנג נומווגוכו	

Index iTEMP TMT162

W

www.addresses.endress.com





