

## Datasheet: FI-500 FiberInspector™ Micro-Fiber Optic Endface Inspection Scope with PortBright™ Illumination.

### Datasheet: FI-500 FiberInspector™ Micro-Fiber Optic Endface Inspection Scope with PortBright™ Illumination.

*Dirty fiber optic endfaces are the major cause of problems in singlemode and multimode fiber optic systems.*

*The FI-500 FiberInspector™ Micro removes the hassle associated with inspecting fiber endfaces, especially in low light and high cable density situations.*

*It is very simple to use:*

*Simply plug the cable into the FI-500 and touch the AF button. Within seconds, the fiber endface comes into sharp, clear view. And if you're working in a difficult to reach place or you can't get the image to stand still, just touch the pause button to freeze the image.*



### Just right for Troubleshooting

Today's high density fiber patch panels make inspection a challenge. Finding the cable or port to test can be tough, especially in the low light conditions found in most data centers and wiring closets.

The FI-500 is designed to simplify the inspection process. The built-in PortBright flashlight helps you find the right port or cable. The small-profile probe fits into tight spots, and features pushbutton controls for simple operation. Autofocus provides a sharp view of the endface in under a second, while the pause button freezes the image on the crisp 320 x 240 display for more detailed inspection.

The FI-500 FiberInspector Micro fills the gap between a manual scope and a fully automated inspection scope. The FI-500 has the simplicity and practicality of a manual inspection scope, but with advanced features to reduce troubleshooting and inspection time.

Manual fiber inspection scopes are simple to use, but they don't work well on patch panels or situations where there is a high density of fiber. Holding it up to one eye and closing your other eye is often inconvenient or impractical, especially in a dark room.

Fully automatic inspection scopes analyze and grade the cleanliness of fiber connections which is important for many applications, but analysis is usually not needed for quick basic troubleshooting.

**TRANSCAT®**  
Trust in every measure

Visit us at [Transcat.com](http://Transcat.com) ➔

[sales@transcat.com](mailto:sales@transcat.com)

1.800.828.1470



Important Benefits	Typical Manual Scopes	FI-500 FiberInspector Micro	Typical Analysis Scope
Illumination of small or dark ports		✓	
Autofocus for quick and stable images*		✓	Model dependent
Compact design to get into tight spaces		✓	Model dependent
Works on patch cords and bulkhead connectors		✓	✓
Wide range of tips to support most connectors		✓	✓
Capture and zoom to see small particles		✓	✓
Endface analysis to highlight dirt			✓
Image storage			✓
Data transfer to PC or cloud			✓
Rugged digital design		✓	✓
Relative cost	Low	Medium	High

\*If the APC tip (Angled Physical Contact) is not aligned with connector, the connector or probe may require rotation and repeating auto-focus or manual focus.

## Fast, Easy Viewing of Fiber Endfaces



*FI-500 displaying a clean fiber endface*



*FI-500 displaying a dirty fiber endface*

FI-500 provides immediate and in-depth visibility into fiber patch cords and bulkhead connectors.



1. Screw-on probe tips to support most connector types.
  - FI-500 includes 4 UPC tips; SC, LC, 1.25 mm and 2.50 mm.
  - Optional APC tip kit includes 4 APC tips; SC, LC, 1.25 mm and 2.50 mm. Other probe tips available.
2. PortBright, a built-in flashlight illuminates dark areas and dense panels.
3. Switch on PortBright with a convenient button on the probe.
4. Pause button holds the image for viewing when it's hard to get it just right.
5. Two second autofocus reduces inspection time and keeps your other hand free. (If the APC tip is not aligned with connector, the connector or probe may require rotation and repeating auto-focus or manual focus.)
6. Status bar to see battery charge and other information. Auto power off increases battery life.
7. Bright 320 x 240 backlit display.
8. Magnification of 200X with 1X, 2X and 4X zoom settings.

- Rugged construction; vibration and drop tested to 1 meter
- Compact design allows you to access dense and crowded panels
- No batteries to change in the probe. Probe is powered by display unit



### FI-500

FiberInspector Micro - includes 4 tips (1.25 mm, 2.50 mm, SC, LC), case, rechargeable batteries and universal power adapter



### FI-525

FI-500 and Cleaning Kit (NFC-KIT-BOX) and 1.25 mm swabs



### FTK1375

FI-500 with SimpliFiber Pro Multimode PMLS kit, VisiFault, and 2 FindFibers




### FTK1475

FI-500 with SimpliFiber Pro Multimode & Singlemode PMLS, VisiFault, 2 FindFibers, Cleaning kit (NFC-KIT-BOX) and 1.25 mm Swabs



### FI-500TP-APC

Set of 4 Angled Physical Contact Tips (1.25 mm, 2.50 mm, SL, LC)

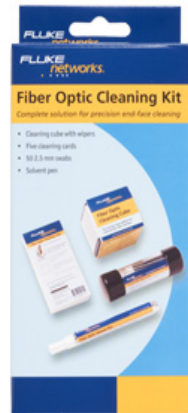

### NFC-KIT-BOX

Fiber Optic Cleaning Kit - Includes cleaning cube with wipes, five cards with sealed cleaning zones, solvent pen and 2.5 mm port cleaning swabs.



**FI-500TP-SCF**

SC bulkhead fiber connectors



**FI-500TP-FCF**

FC bulkhead fiber connectors



**FI-500TP-STF**

ST bulkhead fiber connectors



**FI-500TP-LCF**

LC bulkhead fiber connectors



**FI-500TP-U25F**

2.5 mm (SC, FC, ST) fiber patch cords



**FI-500TP-U125F**

1.25 mm (LC) fiber patch cords



**FI-500TP-ASCF**

SC APC bulkhead fiber connectors



**FI-500TP-ALCF**

LC APC bulkhead fiber connectors



**FI-500TP-A25F**

2.5 mm APC (SC, FC, ST) fiber patch cords



**FI-500TP-A125F**

1.25 mm APC (LC) fiber patch cords



**FI-500TP-AFCF**

FC APC bulkhead fiber connectors



**FI-500TP-EXTS**

Extended LC bulkhead connectors 46 mm

## Specifications

General Specifications	
Temperature range without the power adapter	Operating: 0 °C to +50 °C Storage: -30 °C to +60 °C
Temperature range with the power adapter	Operating: 0 °C to +40 °C Storage: -20 °C to +60 °C
Humidity range	Operating: 0% to 95% °C (0 °C to +50 °C) H non-condensing Storage: 0% to 95% (35 °C to 45 °C) RH non-condensing
Altitude	Operating: 4,000 meters Storage: 12,000 meters
Vibration	2 g, 5 Hz to 500 Hz
Shock	1 meter drop test
Safety	IEC 61010-1 3rd Edition IEC 62133

Display	
Magnification	1x, 2x, 4x
Frames per second	≥12
Battery type*	Rechargeable NiMH, 2 x 1.2V, 2700 mAh
Battery life*	3 hours of continuous probe use 6 hours of typical probe use
Charge time	4 hours minimum
Power adapter	Input: 100 to 240 VAC±10%, 50/60 Hz Output: 6 VDC, 3 A maximum Class II
Display	3.2 inch TFT LCD, 320 x 240
Software upgrades	Upgrades can be installed from a USB drive
Input	USB 2.0, Type A
Dimensions	5.5 in x 3.2 in x 1.5 in (14.0 cm x 8.0 cm x 3.9 cm)
Weight	9.7 oz (275 g)

\*Tested using Gold Peak GH230AAHC batteries. The microscope will operate with alkaline batteries, but they will drain quickly. The display will not try to charge alkaline batteries.

Probe	
Magnification	200x. Zoom function has 1x, 2x and 4x settings
Camera type	5 Megapixel 1/4-inch CMOS sensor
Field of view	610 µm x 460 µm
Resolution	1 µm
Light source	LED, >100,000 hr life
Endface illumination	Coaxial blue LED
Port illumination	2 white LEDs
Power	Supplied through the USB interface
Output	Video output through USB 2.0 interface
Dimensions	4.6 in x 2 in x 0.95 in (117 mm x 51 mm x 23 mm) (length depends on adapter tip)
Weight	4.4 oz (125 g)(with no adapter tip)

## **Fiber Inspection and Cleaning**








Dirt, dust and other contaminants are the enemies of high-speed data transmission over optical fiber. Today's network applications require more bandwidth than ever, making loss budgets tighter than ever. Hence, it is critical that all optical connections are free of contaminants to avoid having application performance issues.

### **Eliminate the #1 cause of fiber failure**

In a survey of installers and network owners commissioned by Fluke Networks, endface contamination was found to be the leading cause of fiber failures. Dirt and contaminants cause insertion loss and back-reflection that inhibit the light transmission and raises havoc with transceivers. And because dirt can migrate from one endface to another upon mating, both sides of any connection must be inspected. Further, mating contaminated connectors can cause permanent damage as microscopic debris is crushed between endfaces in physical contact. Therefore, you must always inspect and clean before mating as a preventative measure and not only after experiencing problems. Even factory terminated patch cords or pigtails must be inspected as protective caps do not keep endfaces clean. Avoiding this common cause of failure starts with inspecting the endface and eliminating any contamination before insertion into a bulkhead or piece of equipment.

### **Range of inspection options**

With a range of solutions, Fluke Networks always has the right tool for you to easily inspect endfaces on a wide variety of connectors.

Fiber Test, Inspection, Cleaning and Certification	SimpliFiber® Pro Test Kits	CertiFiber® Pro OLTS	MultiFiber™ Pro MPO Power Meter	VisiFault™ Visual Fault Locator	Fiber QuickMap™ and OneShot™ PRO	FI-500 FiberInspector™ Micro	FI-7000 FiberInspector™ Pro
							
One button operation				✓	✓	✓	
Locate faults				✓	✓		
Fiber length					✓		
Check connectivity	✓	✓	✓	✓	✓		
Check polarity	✓	✓	✓	✓			
Optical power measurement	✓	✓	✓				
Encircled flux compliant	✓	✓	✓				
Dual-fiber loss testing		✓					
MPO fiber testing			✓				✓
Pass/fail results		✓	✓				✓
View fiber bulkhead and endfaces						✓	✓ + MPO
Capture and analyze bulkhead and endfaces							✓
PortBright illumination						✓	
Autofocus						✓	