

# Pomona®


# TRANSCAT

▶ Visit us at [Transcat.com!](http://Transcat.com)

35 Vantage Point Drive Rochester, NY 14624  
Call 1.800.800.5001

## Model 5170

## Do-It-Yourself In-Line Banana Plug With Flexible Boot

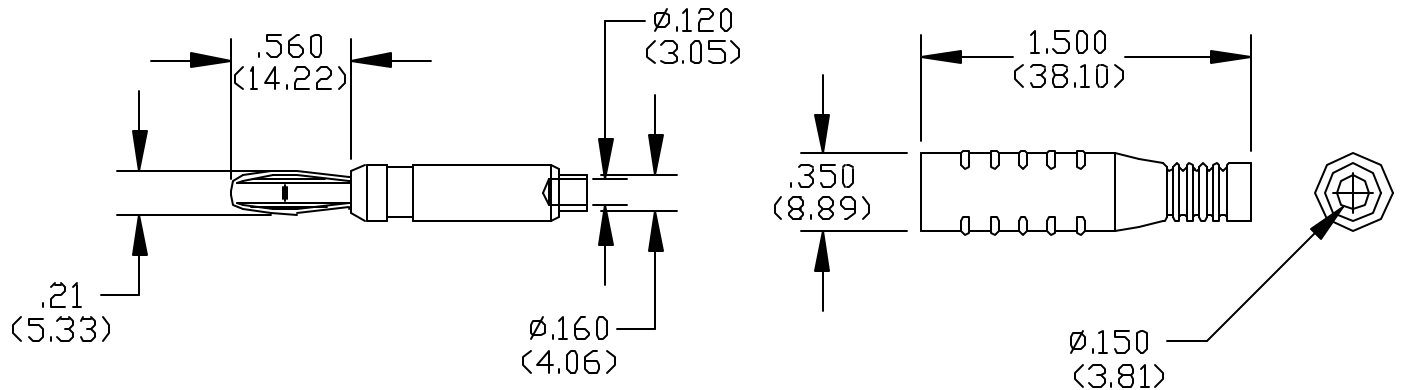

### FEATURES:

- Ideal for making test cables and field repairs.
- Use with Model #5168 Banana Jack to make extension cables
- Part will accept 14, 16 AWG wire, crimp or solder connection.
- Snap-on two piece design allows the wire to be crimped or soldered.

### MATERIALS:

#### In-Line Banana Plug

Plug Body: Brass per QQ-B-626, Alloy 360, ½ Hard.

Spring: Beryllium Copper per ASTM B194, Alloy 172, Cond. HT.

Insulation: Flexible PVC.

Marking: "POMONA"

Finish: Banana Plug – Nickel plated per QQ-N-290, Class 2, 200/300 micro-inches.

### RATINGS: (Independent of Wire)

Operating Temperature: +50°C. (+122°F.) Max.

Working Voltage: Hand-held testing: 30VAC/60VDC Max.

Hands free testing in controlled voltage environments: 5000 WVDC Max.

Current: 15 Amperes

### ORDERING INFORMATION: Model 5170-\*

\*=Color, -0 Black, -2 Red

Ordering Example: 5170-0, Color is Black

Colors other than those specified are available on request.

All dimensions are in inches. Tolerances (except noted): .xx = ±.02" (.51 mm), .xxx = ±.005" (.127 mm).

All specifications are to the latest revisions. Specifications are subject to change without notice.

Registered trademarks are the property of their respective companies. Made in USA

# TRANSCAT

▶ Visit us at [Transcat.com!](http://Transcat.com)

35 Vantage Point Drive // Rochester, NY 14624 // Call 1.800.800.5001